



# MAX1169 Evaluation System/Evaluation Kit

## General Description

The MAX1169 evaluation system (EV system) is a complete high-speed I<sup>2</sup>C-compatible 16-bit data-acquisition system consisting of a MAX1169 evaluation kit (EV kit), Maxim 68HC16MODULE-DIP microcontroller ( $\mu$ C) module, USBTO232, and a HS I<sup>2</sup>C-compatible module.

The HSI2CMOD has a proven HS-mode I<sup>2</sup>C-compatible interface that supports the MAX1169's maximum 2-wire serial clock frequency of 1.7MHz. This solution is implemented on this module by using an Altera EPM3256AQC208-10-programmable logic device (PLD) and a DI2CM core from Digital Core Design.

Order the complete EV system (MAX1169EVC16) for a comprehensive evaluation of the MAX1169 using a personal computer (PC). Order the EV kit (MAX1169EVKIT) separately to evaluate the MAX1169 with a user-supplied HS/fast/standard-mode I<sup>2</sup>C-compatible interface.

To evaluate the MAX1169A\_UD or MAX1169B\_UD, request a free sample of the MAX1169A\_UD or MAX1169B\_UD when ordering the MAX1169 EV kit.

Windows is a registered trademark of Microsoft Corp.

## Features

- ◆ HS I<sup>2</sup>C-Compatible Interface (1.7MHz)
- ◆ Fast I<sup>2</sup>C-Compatible Interface (400kHz)
- ◆ Standard I<sup>2</sup>C-Compatible Interface (100kHz)
- ◆ Proven PCB Layout
- ◆ Fully Assembled and Tested
- ◆ Fully Assembled and Tested
- ◆ EV Kit Software Supports Windows® 98/2000/XP with RS-232/COM Ports
- ◆ EV Kit Software Supports Windows 2000/XP with USB Ports

## Ordering Information

PART	INTERFACE
MAX1169EVKIT	User-supplied HS/fast/standard I <sup>2</sup> C-compatible
MAX1169EVC16	Windows GUI and HS I <sup>2</sup> C compatible

**Note:** The MAX1169 software is included with the MAX1169 EV kit, but is designed for use with the complete EV system. The EV system includes the EV kit, the 68HC16  $\mu$ C module, USBTO232, and the HS I<sup>2</sup>C-compatible module. If the Windows software or HS I<sup>2</sup>C-compatible module is not required, order only the MAX1169 EV kit (instead of the entire EV system).

Evaluate: MAX1169

## MAX1169EVKIT Component List

DESIGNATION	QTY	DESCRIPTION
C1	1	0.01 $\mu$ F $\pm$ 10%, 50V X7R ceramic capacitor (0603) TDK C1608X7R1H103K
C2, C4, C7, C9, C11	5	10 $\mu$ F $\pm$ 20%, 6.3V X5R ceramic capacitors (0805) TDK C2012X5R0J106M
C3, C5, C6, C8, C10	5	0.1 $\mu$ F $\pm$ 10%, 16V X7R ceramic capacitors (0603) TDK C1608X7R1C104KT
FB1	1	Surface-mount ferrite bead (0603) TDK MMZ1608B601C
J1	1	2 x 10 right-angle female connector

DESIGNATION	QTY	DESCRIPTION
JU0-JU3	4	3-pin headers
JU4, JU5	2	2-pin headers
R1	1	4.7 $\Omega$ $\pm$ 5% resistor (0603)
R2	1	10 $\Omega$ $\pm$ 5% resistor (0603)
R3, R4	0	Not installed, resistors
R5	1	4.7k $\Omega$ $\pm$ 5% resistor (0603)
U1	1	16-bit ADC (14-pin TSSOP) Maxim MAX1169CCUD
U2	1	Op amp (5-pin SOT23) Maxim MAX4430EUK
—	1	PCB: MAX1169EVKIT
—	1	MAX1169 EV kit software CD ROM
—	6	Shunts



# MAX1169 Evaluation System/Evaluation Kit

## MAX1169EVC16 System Component List

PART	QTY	DESCRIPTION
MAX1169EVKIT	1	MAX1169 EV kit
68HC16MODULE-DIP	1	68HC16 $\mu$ C module
HSI2CMOD	1	HS I <sup>2</sup> C-compatible module
USBTO232+	1	USB-to-COM port adapter board

## MAX1169EVKIT Files

FILE	DESCRIPTION
HELPPFILE.HTM	MAX1169 EV kit help file
INSTALL.EXE	Installs the EV kit files on your computer
KIT1169.C16	Software loaded into the 68HC16 $\mu$ C
MAX1169.EXE	Application program
UNINST.INI	Uninstalls the EV kit software

## Component Suppliers

SUPPLIER	PHONE	WEBSITE
Altera Corporation	800-800-3753	www.altera.com
Digital Core Design	(48) 32-282-82-66	www.digitalcoredesign.com
Fairchild Semiconductor	888-522-5372	www.fairchildsemi.com
TDK Corp.	847-803-6100	www.component.tdk.com

**Note:** Indicate that you are using the MAX1169 when contacting these component suppliers.

## Quick Start

### Recommended Equipment—USB Port PC Connection Option

- MAX1169EVC16 (MAX1169EVKIT, 68HC16MODULEDIP, USBTO232, HSI2CMOD)
- Two DC power supplies:
  - +8V to +20V at 0.5A
  - +5V at 0.2A
- Analog signal source: 0 to +4.096V
- Windows 2000/XP computer with an available USB port to connect to the USBTO232 board
- USB cable included with the USBTO232

### Procedure

**Caution:** Do not turn on the power until all the connections are completed.

- 1) Visit the Maxim website ([www.maxim-ic.com](http://www.maxim-ic.com)) to download the latest version of the USBTO232 User Guide. Follow the steps in the USBTO232 User Guide *Quick Start* section, and return to step 2 of this Quick Start section when finished.
- 2) Verify that jumpers JU0–JU3 are connected to pins 1–2. This sets the I<sup>2</sup>C-compatible slave address of the MAX1169 to 0x7F.
- 3) Verify that jumper JU4 is OFF. This enables the internal 4.096V (typ) reference.
- 4) Verify that jumper JU5 is OFF. This disconnects the analog input buffer (U2) from AIN.
- 5) Carefully connect the 68HC16 module board to the HS I<sup>2</sup>C-compatible module board by aligning the 40-pin connector. Gently press them together. The two boards should be flush against one another.
- 6) Ensure that the ON/OFF switch (SW1) of the 68HC16 module is in the OFF position.
- 7) Connect the +8V to +20V power supply to the terminal block of the 68HC16 module (J2) located next to SW1 at the top of the  $\mu$ C module. Observe the polarity marked on the board.
- 8) Carefully connect the HS I<sup>2</sup>C-compatible module to the MAX1169 EV kit board by aligning the 20-pin connector. Gently press them together. The two boards should be flush against one another.
- 9) Connect the +5V power supply between the AVDD and AGND pads on the MAX1169 EV kit board.
- 10) Connect the USBTO232 board to the 68HC16MODULE-DIP module if you have not done so already.
- 11) The MAX1169 EV kit software should have already been downloaded and installed in the USBTO232 Quick Start.
- 12) Turn on the 68HC16 module by sliding SW1 to the ON position, and turn on all the power supplies.
- 13) Start the MAX1169 EV kit program by clicking on its icon in the programs section of the Windows **Start | Programs** menu.
- 14) Press the **OK** button to automatically connect and download the KIT1169.C16 file to the module.

# MAX1169 Evaluation System/Evaluation Kit

Evaluate: MAX1169

- 15) The EV kit software uses the value typed in the VREF field to translate the digital code to a voltage. The default is a +4.096V reference value. First, measure the reference voltage of the MAX1169. Then, after typing the measured reference value into the VREF field, press the **Set VREF** button.
- 16) Apply an analog input signal (0V to VREF) between AIN and AGND. Observe the AIN voltage and code labels on the Windows program.

## Recommended Equipment—RS-232/COM Port PC Connection Option

- MAX1169EVC16 (MAX1169EVKIT, 68HC16MODULEDIP, HSI2CMOD)
- Two DC power supplies:
  - +8V to +20V at 0.5A
  - +5V at 0.2A
- Analog signal source: 0 to +4.096V
- Windows 98/2000/XP computer with an available serial (COM) port
- 9-pin I/O extension cable (straight-through, female-to-male)

## Procedure

**Caution: Do not turn on the power until all the connections are completed.**

- 1) Visit the Maxim website ([www.maxim-ic.com/evkit-software](http://www.maxim-ic.com/evkit-software)) to download the latest version of the EV kit software. Save the EV kit software to a temporary folder and uncompress the file (if it is a .zip file).
- 2) Install the MAX1169 EV kit software on your computer by running the INSTALL.EXE program. The program files are copied and icons are created for them in the Windows **Start | Programs** menu.
- 3) Verify that jumpers JU0–JU3 are connected to pins 1-2. This sets the I<sup>2</sup>C-compatible slave address of the MAX1169 to 0x7F.
- 4) Verify that jumper JU4 is OFF. This enables the internal 4.096V (typ) reference.
- 5) Verify that jumper JU5 is OFF. This disconnects the analog input buffer (U2) from AIN.
- 6) Carefully connect the 68HC16 module board to the HS I<sup>2</sup>C-compatible module board by aligning the 40-pin connector. Gently press them together. The two boards should be flush against one another.
- 7) Ensure that the ON/OFF switch (SW1) of the 68HC16 module is in the OFF position.
- 8) Connect the +8V to +20V power supply to the terminal block of the 68HC16 module (J2) located next to SW1 at the top of the  $\mu$ C module. Observe the polarity marked on the board.
- 9) Carefully connect the HS I<sup>2</sup>C-compatible module to the MAX1169 EV kit board by aligning the 20-pin connector. Gently press them together. The two boards should be flush against one another.
- 10) Connect the +5V power supply between the AVDD and AGND pads on the MAX1169 EV kit board.
- 11) Connect the 9-pin serial cable from the computer's serial port to the DB9 connector of the 68HC16 module (J3).
- 12) Turn on the 68HC16 module by sliding SW1 to the ON position, and turn on all the power supplies.
- 13) Start the MAX1169 EV kit program by clicking on its icon in the programs section of the Windows **Start | Programs** menu.
- 14) Press the **OK** button to automatically connect and download the KIT1169.C16 file to the module.
- 15) The EV kit software uses the value typed in the VREF field to translate the digital code to a voltage. The default is a +4.096V reference value. First, measure the reference voltage of the MAX1169. Then, after typing the measured reference value into the VREF field, press the **Set VREF** button.
- 16) Apply an analog input signal (0V to VREF) between AIN and AGND. Observe the AIN voltage and code labels on the Windows program.

# MAX1169 Evaluation System/Evaluation Kit

## Detailed Description of Software

The main window of the evaluation software is shown in Figure 1. This window displays the voltage and code of the analog input signal AIN. The software supports both manual read or automatic read operations. The I<sup>2</sup>C-compatible serial-clock (SCL) frequency is selectable: HS mode (1.7MHz), fast mode (400kHz), or standard mode (100kHz). In HS-mode I<sup>2</sup>C-compatible systems, the communication and arbitration are always done in either fast mode or standard mode. Only data can be transmitted or received at HS-mode speeds. The software expects the use of a 4.096V reference on execution; however, this value can be changed in the software to accommodate a different reference value. Table 1 describes the controls in the main window of the evaluation software.

### External Reference

To disable the MAX1169's internal +4.096V (typ) reference, select external reference mode with a shunt on JU4. Apply the new external reference voltage between the REF and GND pads on the MAX1169 EV kit board. After measuring the external reference voltage, enter it into the VREF field of the software (without the volt unit) and press the **Set VREF** button.

## Detailed Description of Hardware

### MAX1169 EV System

The MAX1169 EV system is a complete 16-bit data-acquisition system consisting of a MAX1169 EV kit, a 68HC16  $\mu$ C module, USBTO232, and an HS I<sup>2</sup>C-compatible module.

The complete MAX1169 EV system is used to evaluate the MAX1169 16-bit, I<sup>2</sup>C-compatible, analog-to-digital converter (ADC). See the *Quick Start* section for setup and operating instructions.

### 68HC16 Module

The 68HC16  $\mu$ C module utilizes Motorola's MC68HC16Z1  $\mu$ C and is fully assembled and tested. This module provides a working example of a  $\mu$ C design for customers who have not yet chosen one for their system or who do not have the ability to connect the MAX1169 EV kit to their own system. The Windows software downloads an assembled program to the on-board random-access memory of the 68HC16 module. For more information, refer to the 68HC16 module data sheet.

### HS I<sup>2</sup>C-Compatible Module

The HS I<sup>2</sup>C-compatible module provides a 2-wire interface peripheral for the 68HC16  $\mu$ C module using an Altera EPM3256AQC208-10 PLD. This peripheral is implemented in the PLD by utilizing the DI2CM core from Digital Core Design. The HS I<sup>2</sup>C-compatible module allows the 68HC16 module to be compatible with HS mode (1.7MHz), fast mode (400kHz), and standard mode (100kHz). This module is not required when evaluating the MAX1169 EV kit with a user-supplied I<sup>2</sup>C-compatible interface. For more information, refer to the HS I<sup>2</sup>C-compatible module data sheet.

### MAX1169 EV Kit

The MAX1169 EV kit board provides a proven layout for evaluating the MAX1169 16-bit, I<sup>2</sup>C-compatible ADC and can be obtained separately without the 68HC16 module, USBTO232, and HS I<sup>2</sup>C-compatible module. The MAX1169 EV kit contains a 16-bit accurate analog input buffer (U2), connected in the unity-gain configuration. A REF pad has been provided on the MAX1169 EV kit board for evaluating the MAX1169 with an external reference. Refer to the MAX1169 data sheet to ensure all interface timing specifications are met when a user-supplied I<sup>2</sup>C-compatible interface is used.

# MAX1169 Evaluation System/Evaluation Kit

Evaluate: MAX1169

Table 1. Software-Control Descriptions

CONTROL	DESCRIPTION
<b>View</b>	Allows the COM port (virtual COM port) debug form to be visible or checks for module status
<b>Help</b>	Allows the user to view the help file or the software's about box
Input      Voltage:      Code: AIN: <b>1.000000 V</b> <b>16000</b>	Displays the AIN voltage and code
I2C Compatible Read Address: <input type="text" value="0x7F"/>	Selects the I <sup>2</sup> C-compatible slave address while reading
<input type="button" value="Set Vref"/> <input type="text" value="4.096"/>	Allows the user to specify the actual reference value in the software.  The EV kit software uses the value typed in the VREF field to translate the digital code to a voltage. The default is a +4.096V reference value. First measure the reference voltage of the MAX1169. Then, after typing in the measured reference value into the VREF field, press the <b>Set VREF</b> button.
<input type="button" value="Read"/>	Performs a single-shot read operation
<input checked="" type="checkbox"/> AutoRead	Performs a read operation specified by the control byte every 250ms. A blinking asterisk indicates <b>AutoRead</b> is active.
Data: <input checked="" type="radio"/> High Speed Mode: 1.7MHz <input type="radio"/> Fast Mode: 400kHz <input type="radio"/> Standard Mode: 100kHz	Selects the I <sup>2</sup> C-compatible SCL frequency for data reception
Communication and Arbitration: <input checked="" type="radio"/> Fast Mode: 400kHz <input type="radio"/> Standard Mode: 100kHz	Selects the I <sup>2</sup> C-compatible SCL frequency for communication and arbitration
<input type="text" value="HS I2C Compatible Module: Not Found"/>	Displays the status of the 68HC16 module and HS I <sup>2</sup> C-compatible module when the module status is requested in the <b>View</b> menu

# MAX1169 Evaluation System/Evaluation Kit

**Table 2. Slave Address Bit 0 (ADD0)**

JUMPER	SHUNT POSITION	DESCRIPTION
JU0	1-2*	DVDD. ADD0 = 1.
	2-3	DGND. ADD0 = 0.

\*Default configuration.

**Table 3. Slave Address Bit 1 (ADD1)**

JUMPER	SHUNT POSITION	DESCRIPTION
JU1	1-2*	DVDD. ADD1 = 1.
	2-3	DGND. ADD1 = 0.

\*Default configuration.

**Table 4. Slave Address Bit 2 (ADD2)**

JUMPER	SHUNT POSITION	DESCRIPTION
JU2	1-2*	DVDD. ADD2 = 1.
	2-3	DGND. ADD2 = 0.

\*Default configuration.

**Table 5. Slave Address Bit 3 (ADD3)**

JUMPER	SHUNT POSITION	DESCRIPTION
JU3	1-2*	DVDD. ADD3 = 1.
	2-3	DGND. ADD3 = 0.

\*Default configuration.

**Table 6. Reference Mode Select**

JUMPER	SHUNT POSITION	DESCRIPTION
JU4	ON	External reference mode enabled. Connect an external reference to REF.
	OFF*	Internal +4.096V reference mode enabled.

\*Default configuration.

**Table 7. Analog Input Buffer**

JUMPER	SHUNT POSITION	DESCRIPTION
JU5	ON	The analog input buffer is connected to AIN. Ensure +5V is applied to the BUF+5 pad and -5V is applied to the BUF-5 pad. Ensure that the noninverting (+) input to the analog input buffer is not left floating.
	OFF*	The analog input buffer is disconnected from AIN.

\*Default configuration.

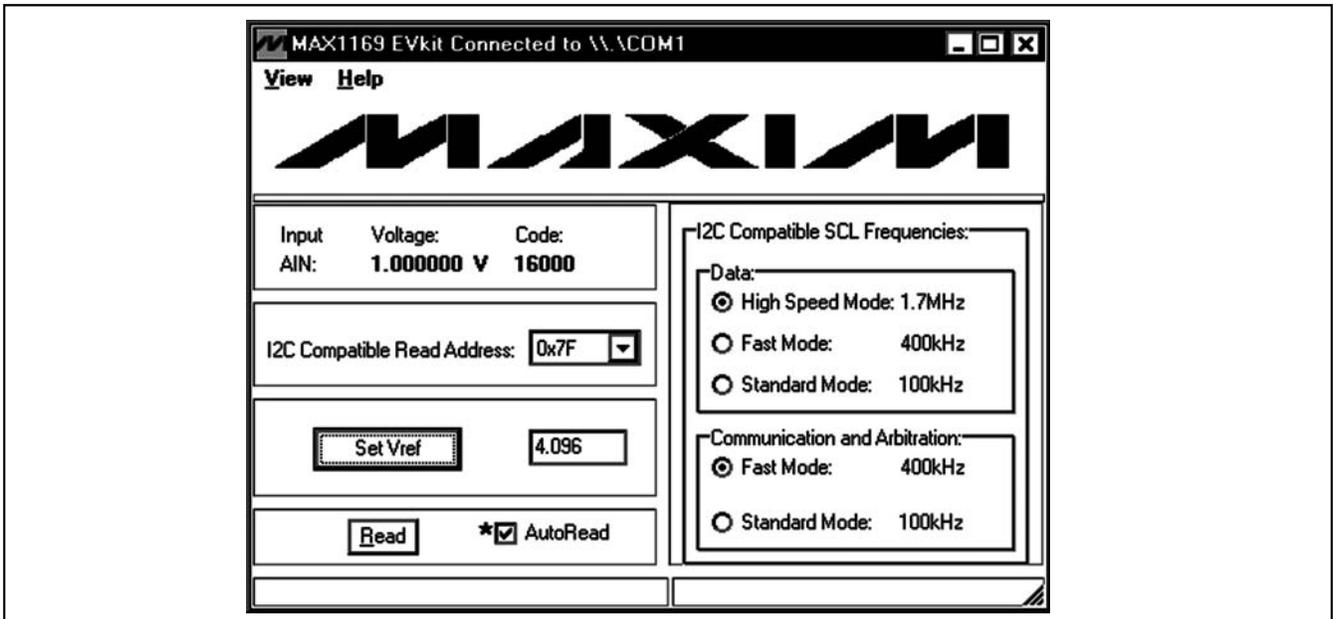


Figure 1. Main Window of the MAX1169 Evaluation Software

# MAX1169 Evaluation System/Evaluation Kit

Evaluate: MAX1169

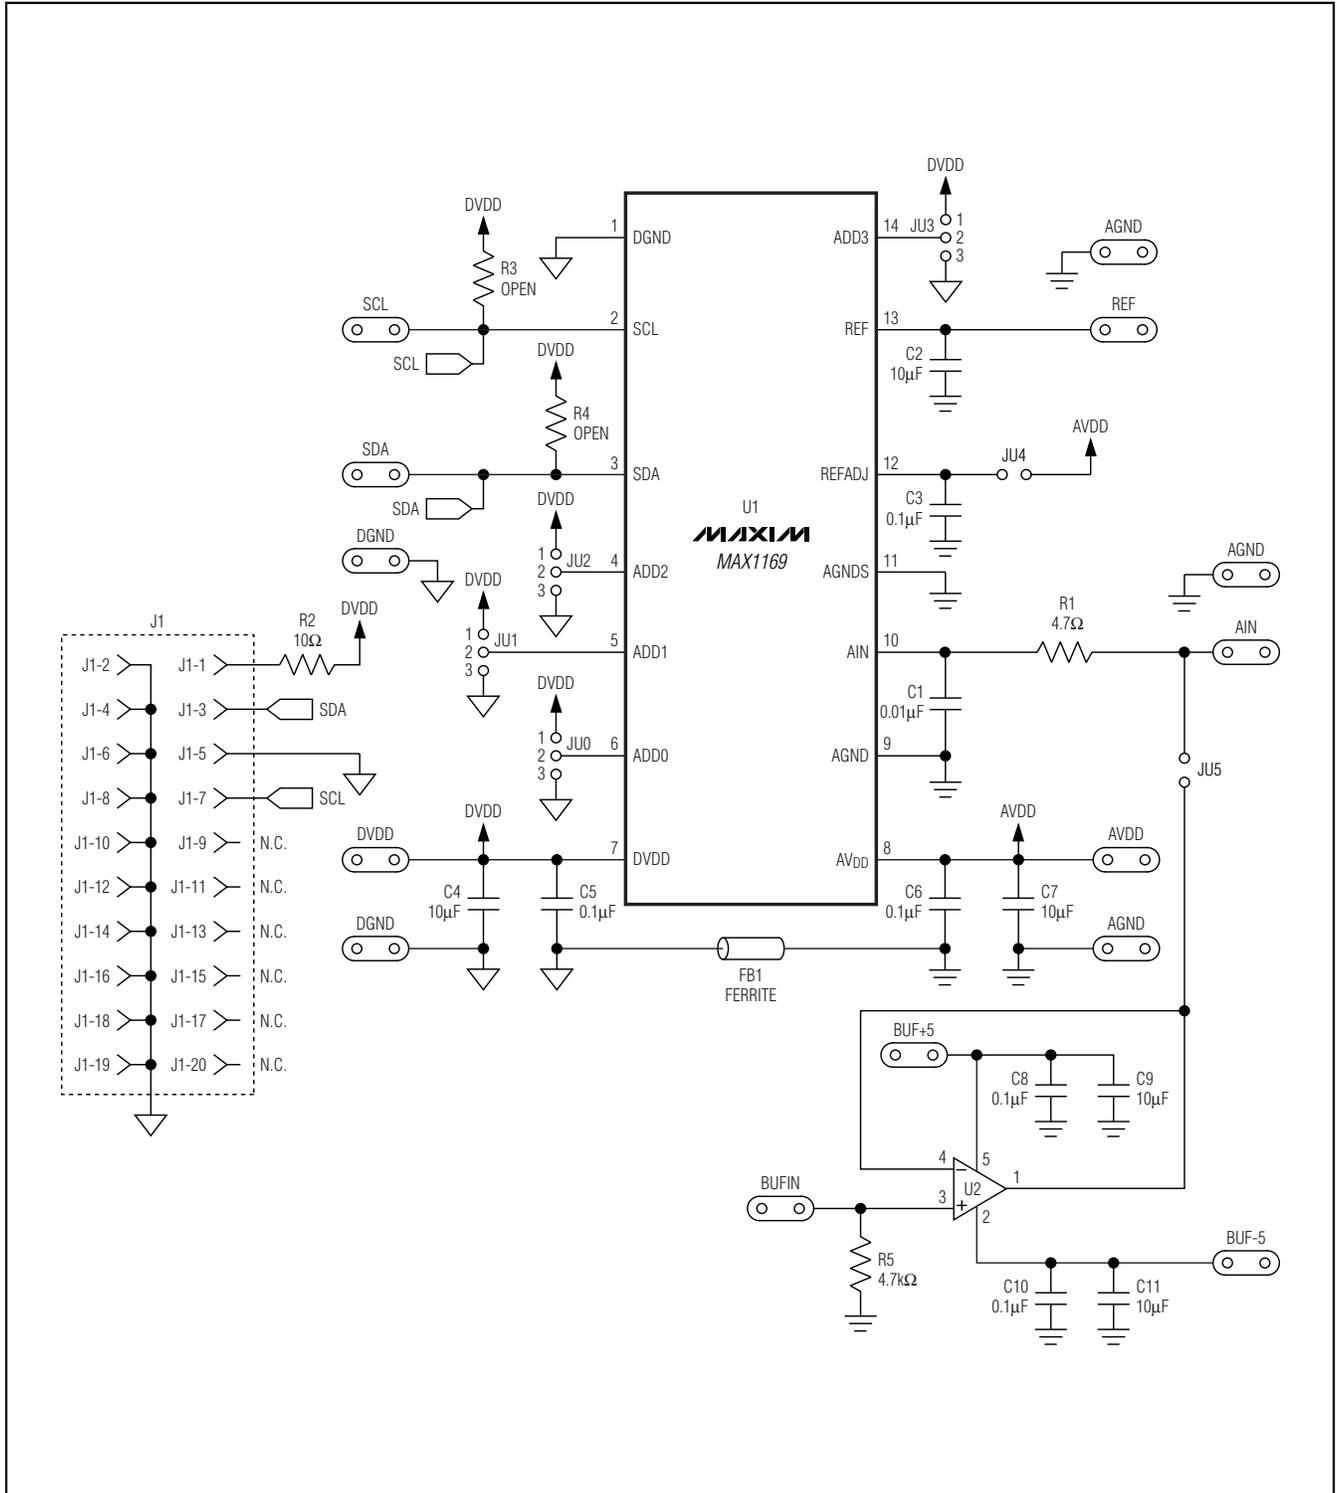


Figure 2. MAX1169EV Kit Schematic

# MAX1169 Evaluation System/Evaluation Kit

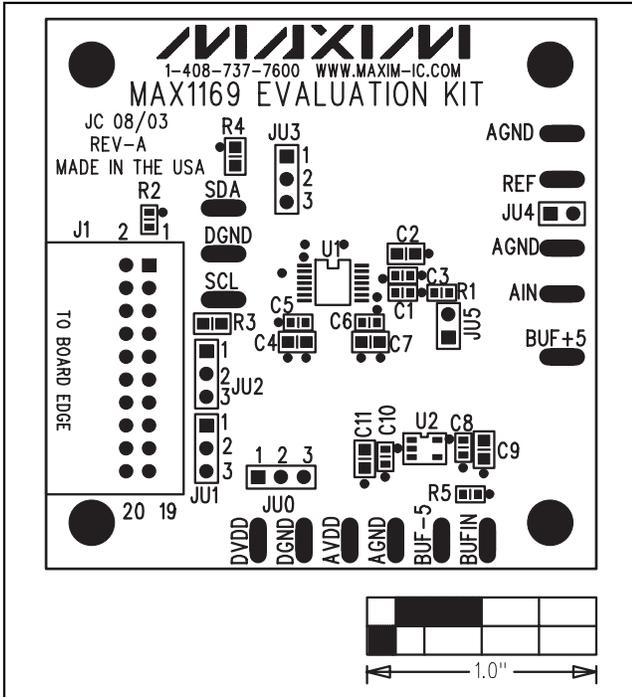


Figure 3. MAX1169 EV Kit Component Placement Guide—Component Side

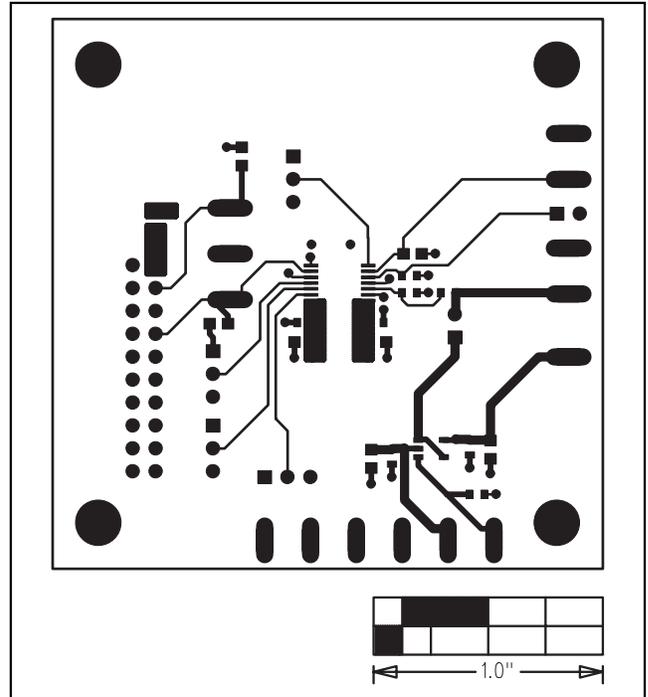


Figure 4. MAX1169 EV Kit PCB Layout—Component Side

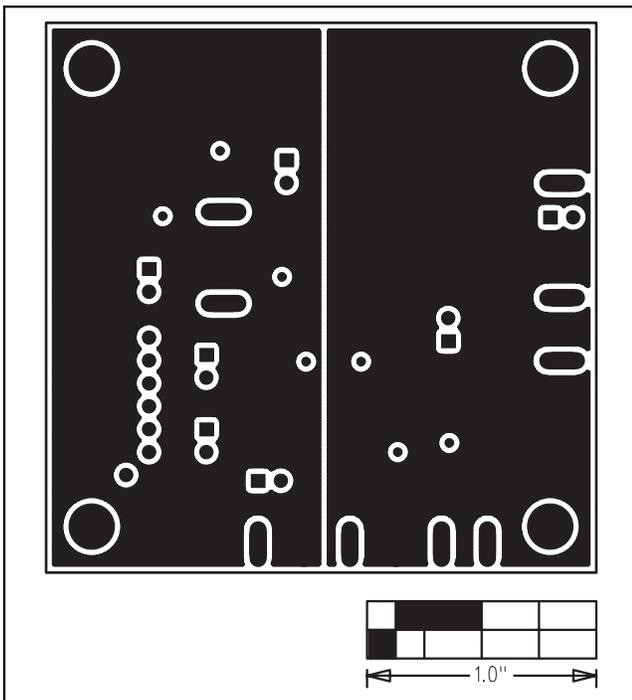


Figure 5. MAX1169 EV Kit PCB Layout—Inner Layer 2 (GND)

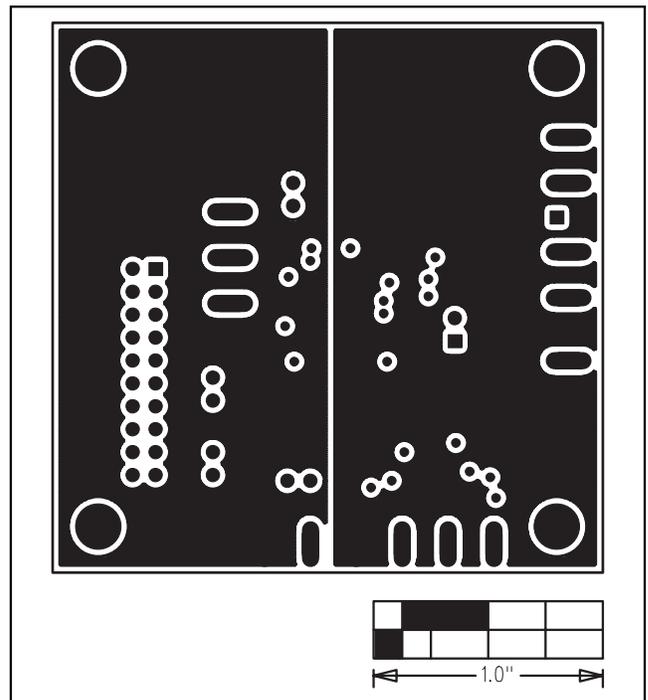


Figure 6. MAX1169 EV Kit PCB Layout—Inner Layer 3 (VDD)

# MAX1169 Evaluation System/Evaluation Kit

Evaluate: MAX1169

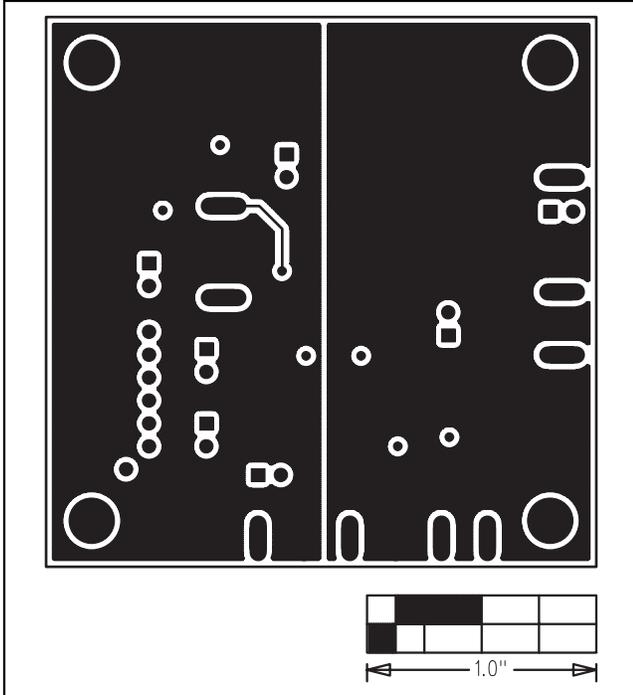


Figure 7. MAX1169 EV Kit PCB Layout—Solder Side

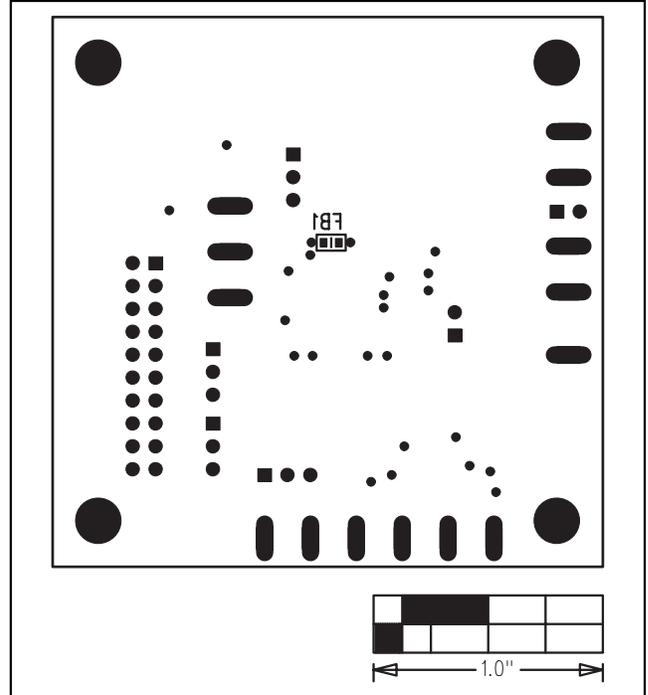


Figure 8. MAX1169 EV Kit Component Placement Guide—Solder Side

## Revision History

Pages changed at Rev 1: 1–8

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600 \_\_\_\_\_ 9