

ANALOG Technical notes on using Analog Devices products and development tools Visit our Web resources http://www.analog.com/ee-notes and http://www.analog.com/processors or **DEVICES** visit our web resources http://www.analog.com or processor.tools.support@analog.com for technical support.

# Interfacing DDR3/DDR2/LPDDR Memory to ADSP-SC5xx/215xx Processors

Contributed by Balaji Kannan, Mitesh Moonat, Gaurav Singh and Sachin-V Kumar

Rev 4 - February 29, 2024

### Introduction

The ADSP-SC5xx/215xx SHARC® family of processors (hereafter referred to collectively as "ADSP-SC5xx processors") incorporate a Dynamic Memory Controller (DMC), which provides a glueless interface between off-chip DDR3/DDR2/LPDDR (hereafter referred to as "DDR") memory devices and the rest of the processor infrastructure. The block diagram in Figure 1 shows at a high level how the DMC module connects various system bus masters (cores, peripheral DMAs, MDMAs, hardware accelerators, and so forth.) to the DDR memory device through the system fabric. For further technical details on the DMC module, refer to the ADSP-SC58x/ADSP-2158x SHARC+® Processor Hardware Reference  $SHARC+^{\mathbb{R}}$  $Manual^{[2],}$ ADSP-SC57x Processor Hardware Reference  $Manual^{[13],}$ SC582/SC583/SC584/SC587/SC589/ADSP-21583/21584/21587 SHARC+ Dual-Core DSP with ARM Cortex-A5 Data Sheet [1] and ADSP-SC570/SC571/SC572/SC573/ADSP-21571/21573 SHARC+ Dual-Core DSP with ARM Cortex-A5 Data Sheet [14].



Not all of the ADSP-SC5xx/ADSP-215xx processors support two DMC blocks. For more details on the exact number of DMC blocks supported on a particular part, refer to the corresponding data

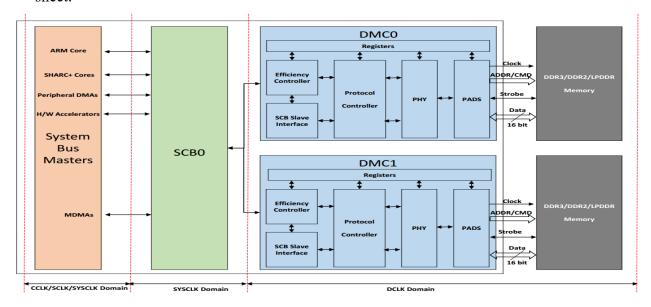


Figure 1. DMC Interface Block Diagram

Copyright 2024, Analog Devices, Inc. All rights reserved. Analog Devices assumes no responsibility for customer product design or the use or application of customers' products or for any infringements of patents or rights of others which may result from Analog Devices assistance. All trademarks and logos are property of their respective holders. Information furnished by Analog Devices applications and development tools engineers is believed to be accurate and reliable, however no responsibility is assumed by Analog Devices regarding technical accuracy and topicality of the content provided in Analog Devices Engineer-to-Engineer Notes.



This EE-note discusses some of the important software and hardware guidelines that must be followed when interfacing ADSP-SC5xx processors with DDR memory devices. The associated zip file includes code examples that can be used for basic DMC initialization and for a few specific application scenarios. The code examples also include a subroutine which can be used to validate the DMC interface for different types of accesses (e.g., core, DMA, 8-/16-/32-/64-bit) and different data patterns (for example, all 0x0, all 0xF, all 0x5, all 0xA, incremental, random, and all bits toggling).

## DDR/LPDDR/DDR2/DDR3 Feature Comparison

Since ADSP-SC5xx processors support three DDR standards (LPDDR, DDR2, and DDR3), it is important to understand the major differences among them (<u>Table 1</u>). Even though DDR itself is not supported on ADSP-SC5xx processors, it is worthwhile to include in the overall comparison. Along with these details, the features not supported on ADSP-SC5xx processors for DDR are shown in <u>red</u>.

Item	DDR	LPDDR	DDR2	DDR3	
Data rate/pin	200/266/333/400 MT/s	200/266/333/360/400 MT/s	400/533/667/800 MT/s	800/1066/1333/1600 MT/s	
CLK frequency	(100/133/166/200 MHz)	(100/133/166/180/200 MHz)	(200/266/333/400 MHz)	(400/533/667/800 MHz) *1	
Power supply	2.5 V	1.8 V	1.8 V	1.5 V	
(VDD/VDDQ)	2.5 V	1.8 V	1.8 V	1.5 V	
Interface	SSTL_2	LV-CMOS	SSTL_18	SSTL_15	
Number of banks	4	4	4 or 8	8	
Prefetch	2 bits	2 bits	4 bits	8 bits	
Burst length	2/4/8	2, 4 or 8 (16 is optional)	4/8	4 (burst chop)/8	
Posted CAS,	No	No	Yes $(AL = 0/1/2/3/4/5)$	Yes $(AL = 0/CL - 1/CL - 2)$	
Additive latency	NO	INO	1 CS (AL = 0/1/2/3/4/3)	1 es (AL = 0/CL - 1/CL - 2)	
RL, WL	RL = CL (no AL), $WL = 1$	RL = CL (no AL), $WL = 1$	RL = AL + CL, WL = RL - 1 = AL $+ CL - 1$	RL = AL + CL, WL = AL + CWL	
ZQ pin	NA	NA	NA	Available. For ZQ calibration*2	
/Reset pin	NA	NA	NA	Available*4	
Driver impedance (Ron)	Programmable	Programmable	Programmable	Programmable	
Driver impedance calibration	NA	NA	For OCD calibration*3,6	For ZQ calibration*2	
ODT function	NA	NA	Available	Available	
ODT calibration	NA	NA	NA*6	For ZQ calibration*2	
CLK-DQS de-skew	NA	NA	274	Available (Write leveling,	
mechanism	INA	NA	NA	Read leveling) *5	
Package	TSOP II	FBGA	FBGA	FBGA	

Table 1. DDR/LPDDR/DDR2/DDR3 Feature Comparison

<sup>1.</sup> With clock frequency of 450 MHz, ADSP-SC5xx processors support data rate only up to 900 MT/s (Mega-Transfers/second).

<sup>2.</sup> ZQ Calibration (memory end): Calibrates DRAM ODT and Ron fluctuations with PVT (process, voltage, and temperature). An external resistor ( $240\Omega\pm1\%$ ) is inserted between the DRAM ZQ pin and GND for reference. To perform ZQ calibration, the ZQCL or ZQCS command is used. (This is a self-calibration in which DDR3 performs all the measurements and adjustments automatically.)

<sup>3.</sup> OCD (Off Chip Driver Calibration): Calibrates DRAM Ron fluctuation with PVT. The external device connected to DRAM performs impedance measurement and adjustment (not self-calibration). OCD is an optional feature in DDR2. This feature is not supported on ADSP-SC5xx processors.



- 4. /RESET pin is introduced in DDR3 for system stability. /RESET is an active-low signal.
- 5. DDR3 DIMM uses fly-by topology for CMD/ADD/CLK signals to improve signal quality, causing flight time differences between DQ/DM/DQS and CMD/ADD/CLK. DDR3 de-skew mechanism to compensate for this is not supported on ADSP-SC5xx processors, which supports only a single DRAM chip.
- 6. Driver Impedance/ODT calibration (processor end): Similar to ZQ calibration on the memory end, ADSP-SC5xx processors support driver impedance and ODT calibration for DDR3/DDR2 with an external resistor DMC RZQ (34 Ω). See "Driver Impedance and ODT Configuration" for more details.

# Software Considerations - DMC Programming Model

Figure 2 shows the programming steps for initializing the DMC module for various DDR modes.

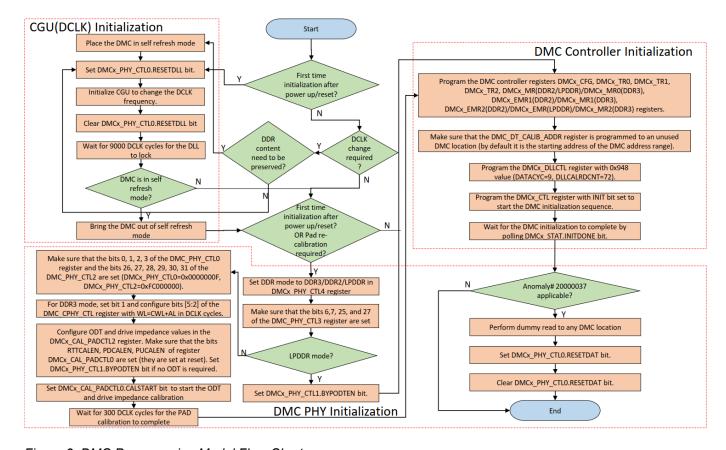


Figure 2. DMC Programming Model Flow Chart

As can be seen, DMC initialization consists of three major steps:

- 1. Clock Generation Unit (CGU) Initialization
- 2. DMC PHY Initialization
- 3. DMC Controller Initialization

### **CGU** Initialization

The first step of DMC initialization is to verify that the DDR Clock (DCLK) is set to the required frequency. On ADSP-SC5xx processors, DCLK clocks both DMC0 and DMC1; however, DCLK can come from either CGU0 (default) or CGU1 by programming the Clock Distribution Unit (CDU). Routing



DCLK from CGU1 is useful for cases where the required DCLK frequency is asynchronous to the CCLK and SYSCLK frequencies. For example, assume a case where the required CCLK frequency is 450 MHz, the SYSCLK frequency is 225 MHz, and the DCLK frequency is 400 MHz. Achieving this frequency combination may not be possible with a single CGU. One way to realize this configuration is to generate CCLK and SYSCLK using CGU0 and DCLK using CGU1. For more details on how to program the CGU and CDU, refer to the hardware reference manual<sup>[2]</sup>.

### Consider the following points:

- Ensure that the DCLK frequency does not violate the unique maximum and minimum JEDEC-specified frequencies for all three DDR modes (DDR3/DDR2/LPDDR). For example, the minimum DCLK frequency for DDR2 is 125 MHz.
- Additional latencies can be added by the fabric for an asynchronous SYSCLK::DCLK ratio.
- The SYSCLK to DCLK clock domain crossing may need to be reprogrammed based on the SYSCLK::DCLK ratio. Refer to the System Crossbars (SCB) chapter of the hardware reference manual<sup>[2]</sup> for more details.

### DMC Initialization after System Reset

After reset, the DCLK generated from CGU0 could be set to the default frequency, which will require that the CGU be reinitialized to set the DCLK to the required new frequency. As shown in <u>Figure 2</u>, complete the following steps when initializing the CGU to generate the required DCLK for the first time after reset:

- 1. Set the DMCx PHY CTLO.RESETDLL bit.
- 2. Initialize the CGU to change the DCLK frequency.
- 3. Clear the DMCx PHY CTLO.RESETDLL bit.
- 4. Wait 9000 DCLK cycles for the DLL to lock. Polling status bits is not necessary, a simple delay loop suffices.



Typically, the CGU is first initialized in either "preload code" (when the application is loaded through the emulator) or by "initialization code" (when the application is loaded by the boot process, in the init block), which may need to be modified to meet system requirements. Refer to the Modifying Default Preload and Initialization Code for Customized CGU/DMC Settings section for more details.

#### On-the-Fly DMC Re-Initialization

If the DCLK frequency is not being changed as part of the re-initialization process, no CGU re-initialization is necessary.

If the DCLK frequency is being changed as part of the re-initialization process, but the DDR content does not need be preserved, use the same steps as described in <u>DMC Initialization after System Reset</u> to reinitialize the CGU.

However, if the DCLK frequency is being changed *and* code or data already resident in DDR memory must be preserved, follow these steps when re-initializing the CGU:

- 1. If anomaly 20-00-0067 applies, ensure that bit 22 of the DMCx\_PHY\_CTL1 register is set. See the anomaly lists<sup>[5][15]</sup> for details.
- 2. Ensure that the DMC is in the idle state by waiting for the DMCx STAT. IDLE bit to be set.



- 3. Place the DMC into self-refresh mode by setting the DMCx CTL. SRREQ bit.
- 4. Poll for the setting of the DMCx\_STAT.SRREQ bit to wait for the self-refresh mode transition to complete.
- 5. Set the DMCx PHY CTLO.RESETDLL bit.
- 6. Initialize the CGU to change the DCLK frequency.
- 7. Clear the DMCx PHY CTLO.RESETDLL bit.
- 8. Wait 9000 DCLK cycles for the DLL to lock.
- 9. Bring the DMC out of self-refresh mode by clearing the DMCx CTL. SRREQ bit.
- 10. Poll for the clearing of the DMCx STAT. SRREQ bit to wait for the self-refresh exit to complete.



When re-initializing the DMC, make sure that the CGU/DMC initialization code is not executed from the DDR memory corresponding to the same DMC. For more details, refer to <u>Question 2</u> in the <u>Frequently Asked Questions</u> section of this EE-note.

### **DMC PHY Initialization**

The DMC PHY provides the interface between the DMC controller and the DMC pads. There are a few registers in the DMC PHY which need to be programmed based on the DDR mode. As shown in <u>Figure 2</u>, the PHY programming includes the following steps:

- 1. Set the appropriate DDR mode (DDR3/DDR2/LPDDR) in the DMCx PHY CTL4 register.
- 2. Make sure that bits 6, 7, 25, and 27 of the DMC PHY CTL3 register are set.
- 3. For DDR2/DDR3 mode, verify that the lower four bits of the DMC\_PHY\_CTL0 register (DMCx\_PHY\_CTL0=0x000000F) and the upper six bits of the DMC\_PHY\_CTL2 register (DMCx\_PHY\_CTL2=0xFC000000) are set.
- 4. For DDR3 mode, write the DMC\_CPHY\_CTL register with bit 1 set and the DMC\_CPHY\_CTL[5:2] bits configured such that WL = CWL + AL (in DCLK cycles).
- 5. Configure the Driver Impedance and On-Die Termination (ODT), as discussed in the <u>Driver Impedance and On-Die Termination (ODT) Configuration section of this EE-Note.</u>



DMC PHY programming typically needs to be done only once after power-up or reset, unless driver impedance and/or ODT recalibration is required.

### Driver Impedance and On-Die Termination (ODT) Configuration

Driver impedance (strength) and on-die termination (ODT) apply to both the memory side and the processor side of the interface, each with its own considerations.

### Memory Side Driver Impedance and ODT

Driver impedance is programmable for all DDR modes:

• LPDDR: DMC\_EMR

• DDR2: DMC EMR1



• DDR3: DMC MR1

However, drive impedance calibration is supported only for DDR3 mode.

ODT is programmable only for DDR2 and DDR3 modes:

DDR2: DMC\_EMR1DDR3: DMC\_MR1

However, ODT calibration is supported only for DDR3 mode. For details, refer to the corresponding DDR memory device data sheet.

Both the driver impedance and ODT for the memory can be programmed as part of the DMC controller initialization by programming the corresponding mode registers accordingly.



In DDR3 mode, during DMC initialization, the DDR3 controller sends a ZQ Cal Long command (coarse calibration) to the memory device. After every self-refresh exit command, the controller also issues a ZQ Cal Long command to the device. A ZQ Cal Short command for fine calibration must be issued by the application (for example, a GP timer) in software. For more details, refer to the hardware reference manual [2].

### **Processor Side Driver Impedance and ODT**

Driver impedance is programmable only for the DDR2 and DDR3 modes, and driver impedance calibration is supported for both. The DMC pads can be auto-calibrated to the required driver impedance using an external resistance DMC RZQ by programming the DMCx CAL PADCTL2 register:

- The DMCx\_CAL\_PADCTL2.IMPWRAD bit field for the address (DMC\_A[nn], DMC\_BA[n]) and command (DMC\_CKE, DMC\_CS[n], DMC\_ODT, DMC\_RAS, DMC\_RESET, DMC\_WE) pads configure the driver impedance. The recommended value to be programmed is 60 Ω (0x3C) for both DDR2 and DDR3.
- The DMCx\_CAL\_PADCTL2.IMPWRDQ bit field for the data (DMC\_DQ[nn]), DQS (DMC\_LDQS, /DMC\_LDQS, DMC\_UDQS, /DMC\_UDQS), clock (DMC\_CK, /DMC\_CK), and DM (DMC\_UDM, DMC\_LDM) pads configure the driver impedance. The recommended value to be programmed is 40 Ω (0x28) for both DDR2 and DDR3.

ODT is programmable only for the DDR2 and DDR3 modes, and ODT calibration is supported for both. The DMC PHY can be programmed to auto-calibrate the ODT value (parallel termination) on the data and DQS pads by programming the DMCx\_CAL\_PADCTL2.IMPRTT bit field to 1.6 times the required ODT value in Ohms. For example, for 75  $\Omega$  termination, program the DMCx\_CAL\_PADCTL2.IMPRTT bit field to 1.6 \* 75 = 120 (0x78). Set the DMCx\_PHY\_CTL1.BYPODTEN bit to bypass ODT programming.

Complete the following steps to configure ODT and calibrate driver impedance on the ADSP-SC5xx processor:

- 1. Configure ODT and drive impedance values in the DMCx\_CAL\_PADCTL2 register, as discussed above. Ensure that the DMCx\_CAL\_PADCTL0 register bits RTTCALEN, PDCALEN, and PUCALEN are set (they are set at reset).
- 2. Set the DMCx CAL PADCTLO.CALSTART bit to start the ODT and drive impedance calibration.
- 3. Wait for 300 DCLK cycles for the pad driver impedance and ODT calibration to complete. Polling status bits is unnecessary, as a simple delay loop suffices.



#### **DMC Controller Initialization**

The final step for the DMC initialization is the DMC controller initialization. The controller has a set of registers which has various bit fields that are categorized as follows:

- Hard-Wired Settings
- Mandatory Settings
- Optional Settings

### Hard-Wired Settings

There are a few bits which are hard-coded in the DDR controller that software cannot adjust. <u>Table 2</u> through Table 7 shade these bit fields in <u>ORANGE</u>.

#### Mandatory Settings

Many bits in the configuration, timing, and mode registers must be programmed based on the system to ensure proper DMC operation in the application. <u>Table 2</u> through <u>Table 7</u> shade these bit fields in <u>GREEN</u>. For more details on how to program these bit fields, refer to the hardware reference manual <sup>[2]</sup>.

### **Optional Settings**

There are a few bit fields which are not required to be modified for standard DMC operation; however, deeper knowledge of these bits saves power and improves throughput in certain application configurations. For example, the DMC\_CTL.SRREQ bit can be used to operate the DMC in a low-power (self-refresh) mode, and the DMC\_EMR2.PASR bit (in LPDDR only) may help for intelligent power savings. The DMC\_CTL.PREC bit enables automatic precharge after each access, and the DMC\_CTL.ADDRMODE bit improves throughput by switching between page and bank interleaving addressing modes. Users are expected to understand the functionality of these bits clearly by going through the hardware reference manual<sup>[2]</sup> and the corresponding memory device data sheet (especially for mode registers). These bits are shaded in Table 2 through Table 7.

Referring back to Figure 2, complete the following steps to initialize the DMC controller:

1. Program the DMC configuration register (DMCx CFG), as described in Table 2.

Register	Bit Field		Bit field (C=Controller, M=JEDEC)	Value	Comment
	IFWID	Interface Width	3:0-C		Always program to <b>2</b> (16-bit). All other values are reserved.
DMC_CFG	SDRWID	SDRAM Width	7:4-C	Mandatory	Always program to <b>2</b> (16-bit). All other values are reserved.
	SDRSIZE	SDRAM Size	11:8-C		Obtain from memory device data sheet.
	EXTBANK	External Banks	15:12-C		Always program to zero (16-bit). All other values are reserved.
	Reserved	Reserved	31:16-C		Always write these bits with zero.

Table 2. DMC Controller Configuration Register Bit Fields



2. Program the DMC timing registers (DMCx\_TR0, DMCx\_TR1, and DMCx\_TR2), as described in  $\underline{\text{Table 3}}$ .

Register	Bit Field		Bit field (C=Controller, M=JEDEC)	Value	Comment
	TRCD	RAS# to CAS# delay time	3:0-C	-	Obtain from memory device data sheet.
	TWTR	Write-to-Read delay	7:4-C		
	TRP	Precharge-to- Active time	11:8-C		
DMC_TR0	TRAS	Active-to- Precharge time	16:12-C		
	Reserved	Reserved	19:17-C		Always write these bits with zero.
	TRC	Active-to-Active time	25:20-C		Obtain from memory device data sheet.
	Reserved	Reserved	27:26-C		Always write these bits with zero.
	TMRD	Mode register set- to-active	31:28-C		Obtain from memory device data sheet.
	TREF	Refresh Interval	13:0-C	Mandatory	
	Reserved	Reserved	15:14-C		Always write these bits with zero.
	TRFC	Refresh-to- Active	23:16-C		Obtain from memory device data sheet.
DMC_TR1	D 1	command delay	27.24.6		At the state of
	Reserved	Reserved Active-to-Active	27-24-C		Always write these bits with zero.
	TRRD	time	30-28-C		Obtain from memory device data sheet.
	Reserved	Reserved	31		Always write this bit with zero.
	TFAW	Four Activate Window	4:0-C		Obtain from memory device data sheet. tFAW is not applicable for LPDDR mode and should be kept <b>zero</b> .
	Reserved	Reserved	7:5-C		Always write these bits with zero.
	TRTP	Internal Read to Precharge time	11:8-C		Obtain from memory device data sheet. tRTP is not applicable for LPDDR mode and should be kept <b>zero</b> .
DMC_TR2	TWR (LPDDR only)	Write recovery time	15:12-C		Obtain from memory device data sheet.
	ТХР	Exit power down to next valid command	19:16-C		
	tCKE	CKE min pulse width	23:20-C		
	Reserved	Reserved	31:24-C		Always write these bits with zero.

Table 3. DMC Controller Timing Register Bit Fields



- 3. Program the DMC controller mode registers, depending on the mode being used:
  - a. DDR2: Program the DMCx\_MR, DMCx\_EMR1, and DMCx\_EMR2 registers ( $\underline{Table\ 4}$ ).

Register	Bit Field		Bit field (C=Controller, M=JEDEC)	Value	Comment
	BL	Burst Length	2:0-C , A2:A0-M		Program burst length to 4/8, as per requirements. Refer to the hardware reference manual <sup>[2]</sup> for more details.
	BT	Burst Type	3-C, A3-M		Only sequential burst type is supported. Keep this bit zero.
	CL	CAS Latency	6:4-C, A6:A4-M		Program these bits with the required CAS latency.
	TM	Test Mode	7-C, A7-M		Always program this bit to zero, as test mode is not supported.
DMC_MR	DLLRST	DLL Reset	8-C, A8-M	Mandatory	Clear this bit for DDR2 mode.
	WRRECOV	Write recovery	11:9-C, A11:A9-M	,	Program these bits with tWR value from the memory device data sheet. Refer to the hardware reference manual <sup>[2]</sup> for more details.
	PD	Active Power Down Mode	12-C, A12-M	Optional	Can be left unchanged for standard DMC operation. Refer to the hardware reference manual $^{[2]}$ for more details.
	Reserved	Reserved	15:13-C, A15:A13-M	Hard	These bits are hard-wired to <b>zero</b> .
	Reserved	Reserved	31:16-C	Wired	These sits are hard-wheel to Zero.
	DLLEN	DLL Enable	0-C, A0-M		Keep this bit set to <b>zero</b> .
	DIC	Output Driver Impedance Control	1-C, A1-M		Select the driver impedance using these bits from the memory side.
	RTT	On Die Termination (ODT)	6,2-C, A6,A2-M		Select ODT value using these bits from the memory side.
	AL	Additive Latency	5,3-C, A5,A3-M	Mandatory	Can be cleared for basic DMC initialization. Refer to the memory device data sheet for more details on this bit.
DMC_EMR1	OCD	Off Chip Driver (OCD) Calibration	9:7-C, A9:A7-M		OCD not supported. Keep this bit set to zero.
	DQS#	DQS# Enable	10-C, A10-M		Keep this bit set to zero.
	RDQS	RDQS Enable	11-C, A11-M		RDQS is not supported. Keep this bit set to zero.
	QOFF	Output Buffer Enable	12-C, A12-M		Keep this bit set to zero.
	Reserved	Reserved	15:13-C, A15:A13-M	Hard	These bits are hard-wired to zero.
	Reserved	Reserved	31:16-C	Wired	These one are natu-wired to zero.
	PASR	Partial Array Self Refresh	2:0-C, A2:A0-M	Optional	This bit is unchanged for standard DMC operation. Refer to the hardware reference manual <sup>[2]</sup> for more details.
	DCC	DCC Enable	3-C, A3-M	Mandatory	DCC is not supported. Keep this bit set to zero.
DMC_EMR2	Reserved	Reserved	6:4-C, A6:A4-M	Mandatory	Program these bits to zero.
-	SRF	High Temperature Self Refresh Rate Enable	7-C, A7-M	Optional	These bits are unchanged for standard DMC operation. Refer to the hardware reference manual <sup>[2]</sup> for more details.
	Reserved	Reserved	15:8-C, A15:A8-M	Hard	These bits are hard-wired to <b>zero</b> .
	Reserved	Reserved	31:16-C	Wired	These one are nare-wired to zero.

Table 4. DMC Controller DDR2 Mode Register Bit Fields



b. DDR3: Program the DMCx\_MR0, DMCx\_MR1, and DMCx\_MR2 registers (Table 5).

Register	Bit Field		Bit field (C=Controller, M=JEDEC)	Value	Comment
	BL	Burst Length	1:0-C, A1:A0-M		Only BL=8 is supported for DDR3. Always program these bits with <b>zero</b> .
	CL	CAS Latency	6:4,2-C, A6:A4, A2- M		Program these bits with the required CAS latency.
	ВТ	Burst Type	3-C, A3-M		Only sequential burst type supported. Keep this bit zero.
	TM	Test Mode	7-C, A7-M	Mandatory	Always program this bit to <b>zero</b> , as test mode is not supported.
DMC_MR0	DLLRST	DLL Reset	8-C, A8-M		Set this bit for DDR3 mode.
	WRRECOV	Write recovery	11:9-C, A11:A9-M		Program these bits with tWR value from the memory device data sheet. Refer to the hardware reference manual <sup>[2]</sup> for more details.
	PD	Active Power Down Mode	12-C, A12-M	Optional	Can be left unchanged for standard DMC operation. Refer to the hardware reference manual <sup>[2]</sup> for more details on these bits.
	Reserved	Reserved	15:13-C, A15:A13-M	Hard	These bits are hard-wired to <b>zero</b> .
	Reserved	Reserved	31:16-C	Wired	
	DLLEN	DLL Enable	0-C, A0-M		Keep this bit set to zero.
DMC_MR1	DIC0, DIC1	Output Driver Impedance Control	5,1-C, A5,A1-M		Select the driver impedance using these bits from the memory side.
	RTT0, RTT1, RTT2	On Die Termination (ODT)	9,6,2-C, A9,A6,A2-M	Mandatory	Select ODT value using these bits from the memory side.
	AL	Additive Latency	4,3-C, A4,A3-M		Can be cleared for basic DMC initialization. Refer to the memory device data sheet for more details.
	WL	Write Levelization	7-C, A7-M		Write levelling is not supported. Keep this bit zero.
	Reserved	Reserved	8, 10-C, A8, A10 –M		These bits are reserved for future use (must be programmed to <b>zero</b> ).
	TDQS	Termination Data Strobe	11-C, A11-M		Should be <b>zero</b> , as it is not applicable for 16-bit devices.
	QOFF	Output Buffer Enable	12-C, A12-M		Should be zero.
	Reserved	Reserved	15:13-C, A15:A13-M	Hard	
	Reserved	Reserved	31:16-C	Wired	These bits are hard-wired to zero.
	PASR	Partial Array Self Refresh	2:0-C, A2:A0-M	Optional	This bit is unchanged for standard DMC operation. Refer to the hardware reference manual <sup>[2]</sup> for more details.
	CWL	CAS Write Latency	5:3-C, A5:A3-M	Mandatory	Obtain from memory device data sheet.
DMC_MR2	ASR	Auto Self Refresh	6-C, A6-M	Optional	These bits are unchanged for standard DMC operation. Refer to the hardware reference manual <sup>[2]</sup> for more details.
	SRT	Self-Refresh Temperature Range	7-C, A7-M	-,	
	Reserved	Reserved	8-C, A8-M		This bit is hard-wired to zero.
	RTTWR	Dynamic ODT Write	10:9-C, A10:A9-M		Rtt_WR is not supported. These bits are hard-wired to zero.
	Reserved	Reserved	15:11-C, A15:A11-M	Hard Wired	These bits are hard-wired to zero.
	Reserved	Reserved	31:16-C		The state and that a state of the state of t

Table 5. DMC Controller DDR3 Mode Register Bit Fields

c. LPDDR: Program the DMCx\_MR and DMCx\_EMR registers ( $\underline{Table\ 6}$ ).



Register	Bit Field		Bit field (C=Controller, M=JEDEC)	Value	Comment
	BL	Burst Length	2:0-C , A2:A0-M		Program burst length to 4/8 as per requirements (burst length of 2 is not supported). Refer to the hardware reference manual <sup>[2]</sup> for details.
	ВТ	Burst Type	3-C, A3-M	Mandatory	Only sequential burst type is supported. Keep this bit set to <b>zero</b> .
DMC_MR		6:4-C, A6:A4-M		Only CL=3 is supported for LPDDR mode.	
	Reserved	Reserved	15:13-C, A15:A13-M	нага	These bits are hard-wired to zero.
	Reserved	Reserved	31:16-C	Wired	2000
	PASR	Partial Array Self Refresh	2:0-C, A2:A0-M		This bit is unchanged for standard DMC operation. Refer to the
DMC_EMR	TSCR	Temperature Compensated Self Refresh	4:3-C, A4-A3-M	Optional	hardware reference manual <sup>[2]</sup> for more details.
	DS	Drive Strength	7:5-C, A7-A5-M	Mandatory	Select the driver impedance (strength) using these bits from the memory side.
	Reserved	Reserved	15:8-C, A15:A8-M	Hard	These bits are hard-wired to zero.
	Reserved	Reserved	31:16-C	Wired	These ons are natu-when to zero.

Table 6. DMC Controller LPDDR Mode Register Bit Fields

- 4. Make sure that the DMC\_DT\_CALIB\_ADDR register (<u>Table 7</u>) is programmed to an unused DMC location (by default, it is the starting address of the DMC address range). Refer to the hardware reference manual<sup>[2]</sup> for more details.
- 5. Program the DMCx\_DLLCTL register (Table 7) with the value 0x948 (DATACYC = 9, DLLCALRDCNT = 72).
- 6. Program the DMCx\_CTL register (<u>Table 7</u>) with DMCx\_CTL.INIT set to start the DMC initialization sequence.
- 7. Wait for the DMC initialization to complete by polling for the DMCx STAT. INITDONE bit to set.



Register	Bit Field		Bit field (C=Controller, M=JEDEC)	Value	Comment
	DDR3EN	Enable DDR3 mode	0-C		Set this bit for DDR3 mode, clear for DDR2 and LPDDR modes.
	LPDDR	Enable LPDDR mode	1-C	Mandatory	Set this bit for LPDDR mode, clear for DDR3 and DDR2 modes.
	INIT	Start DMC initialization	2-C		Set this bit to start the DMC initialization sequence.
	SRREQ	Self-Refresh Request	3-C		
	PDREQ	Power Down Request	4-C		
	DPDREQ	Deep Power Down Request	5-C	Optional	These bits are unchanged for standard DMC operation. Refer to the hardware reference manual <sup>[2]</sup> for more details.
	PREC	Precharge	6-C		
DMC_CTL	RESET	Reset SDRAM	7-C	1	
	ADDRMODE	Addressing Mode	8-C		
	RDTOWR	Read-to-Write Cycle	11:9-C	Mandatory	Always program this bit field with 2.
	PPREF	Postpone Refresh	12-C	Optional	These bits are unchanged for standard DMC operation. Refer to the hardware reference manual <sup>[2]</sup> for more details.
	DLLCAL	DLL Calibration Start	13-C		
	Reserved	Reserved	23:14-C	Mandatory	Always write these bits with zero.
	ZQCS	ZQ Calibration Short	24-C	Optional	These bits are unchanged for standard DMC operation. Refer to the hardware reference manual <sup>[2]</sup> for more details.
	ZQCL	ZQ Calibration Long	25-C		
	Reserved	Reserved	31:26-C	Mandatory	Always write these bits with zero.
	DLLCALRDCNT	DLL Calibration RD Count	7:0-C		Program this bit field to 72.
DLLCTL	DATACYC	Data Cycles	11-8-C	Mandatory	Program this field to 9.
	Reserved	Reserved	31:9-C		Always write these bits with zero.
DMC_DT_CALIB_ADDR		Data Calibration Address Register	31:0-C		Program this value with an unused DMC address. Refer to the hardware reference manual $^{[2]}$ for more details.

Table 7. DMC Controller Control/Calibration Bit Fields



In addition to the above steps, also ensure that the workaround to anomaly 20-00-0037 (if applicable to the processor silicon revision being used) is also implemented *after* the DMC initialization is complete. See the processor silicon anomaly lists <sup>[5]</sup> [15] for details.



Before the DDR controller enters the initialization procedure, it automatically provides the appropriate power-up/reset/first command timing according to the JEDEC standards.



#### **DMC Initialization Code**

The ZIP file<sup>[6]</sup> associated with this EE-note provides the CGU and DMC initialization subroutines along with code examples which can be used to initialize the CGU and DMC controller for any custom settings.

#### **CGU** Initialization

The CGUInit.c and CGUInit.h files can be used to initialize the CGU to the required clock settings. For example, the main.c file in the ADSP-SC58x/DDR3\_Init\_Core1 folder illustrates how to initialize the CGU to generate the following clock combination on the ADSP-SC589 EZ-Board®, which features a 25 MHz CLKIN, as shown in Listing 1:

- PLLCLK = 450 MHz
- CCLK = 450 MHz
- SYCLK = 225 MHz
- DCLK = 450 MHz
- SCLK0 = SCLK1 = 225 MHz

```
void CGUInit(void)
{
    int i:
    //PLLCLK = 450 MHz, CCLK = 450 MHz, SYCLK = 225 MHz, DCLK = 450 MHz, SCLK0 = SCLK1 = 225 MHz
    CGU0_PARAM_LIST_DEFAULT.ctl_MSEL=18;
    CGU0_PARAM_LIST_DEFAULT.ctl_DF=0;
    CGU0 PARAM LIST DEFAULT.div CSEL=1;
    CGU0 PARAM LIST DEFAULT.div SYSSEL=2;
    CGU0 PARAM LIST DEFAULT.div S0SEL=2;
    CGU0_PARAM_LIST_DEFAULT.div_S1SEL=2;
    CGU0_PARAM_LIST_DEFAULT.div_DSEL=1;
    //Set DMCx PHY CTL0.RESETDLL bit.
    *pREG_DMC0_PHY_CTL0=0x800;
    *pREG_DMC1_PHY_CTL0=0x800;
    //Initialize CGU to change the DCLK frequency
    CGU_Init(0, 0, &CGU0_PARAM_LIST_DEFAULT, 0);
    //Clear DMCx_PHY_CTL0.RESETDLL bit
    *pREG_DMC0_PHY_CTL0=0x000;
    *pREG_DMC1_PHY_CTL0=0x000;
    //Wait for 9000 DCLK cycles for the DLL to lock
    for(i=0;i<9000*DMC_Param_List.cclk_dclk_ratio;i++);</pre>
}
```

Listing 1. CGU Initialization

For custom clock settings, the values of MSEL, DF, CSEL, SYSSEL, SOSEL, S1SEL, and DSEL can be changed accordingly.



#### **DMC** Initialization

The DMCInit.c and DMCInit.h files can be used to initialize the DMC to the required settings. For example, the main.c file in the ADSP-SC58x/DDR3\_Init\_Core1 folder illustrates how to initialize the DMC for the Micron MT41K128M16-125 DDR3 memory device<sup>[7]</sup> with a DCLK frequency of 450 MHz, as shown in <u>Listing 2</u>.

```
//Initialize the DMC parameters list
DMC Param List.dmc no=0;
DMC_Param_List.ddr_mode=DDR3_MODE;
DMC_Param_List.phy_init_required=true;
DMC Param List.cclk dclk ratio=1;
DMC_Param_List.anomaly_20000037_applicable=true;
DMC_Param_List.dmc_ctl_value=DMC_CTL_VALUE;
DMC Param List.dmc cfg value=DMC CFG VALUE;
DMC_Param_List.dmc_tr0_value=DMC_TR0_VALUE;
DMC_Param_List.dmc tr1 value=DMC TR1 VALUE;
DMC_Param_List.dmc_tr2_value=DMC_TR2_VALUE;
DMC_Param_List.dmc_mr0_value=DMC_MR0_VALUE;
DMC_Param_List.dmc_mr1_value=DMC_MR1_VALUE;
DMC_Param_List.dmc_mr2_value=DMC_MR2_VALUE;
DMC Param List.padctl2 value=DMC PADCTL2 VALUE;
DMC_Param_List.dmc_cphyctl_value=DMC_CPHYCTL_VALUE;
DMC_Param_List.dmc_data_calib_add_value=DMC0_DATA_CALIB_ADD;
//Initialize CGU - PLLCLK = 450 MHz, CCLK = 450 MHz, SYCLK = 225 MHz, DCLK = 450 MHz, SCLK0 = SCLK1 = 112.5 MHz
CGUInit();
//Initialize DMC0 now
DMCInit(DMC Param List);
DMC Param List.dmc no=1;
DMC Param List.dmc data calib add value=DMC1 DATA CALIB ADD;
//Initialize DMC1 now
DMCInit(DMC_Param_List);
```

Listing 2. DMC Initialization



Though the ADSP-SC5xx processors do not support the DDR3L (1.35 V) standard, the MT41K128M16 is backward compatible with the 1.5 V standard, thus it can be used without issue. When interfacing a DDR3L device with ADSP-SC5xx processors, contact the memory vendor to make sure that it is compatible with the DDR3 standard.

For custom DMC settings, the DMC\_Param\_List structure must be updated according to the system requirements. The DMC register values can be derived using the DMC\_Registers\_List.xlsx spreadsheet in the associated ZIP file<sup>[6]</sup> by entering various DMC-specific processor and DDR memory-specific parameters (from the device data sheet), as shown in <u>Figure 3</u>.



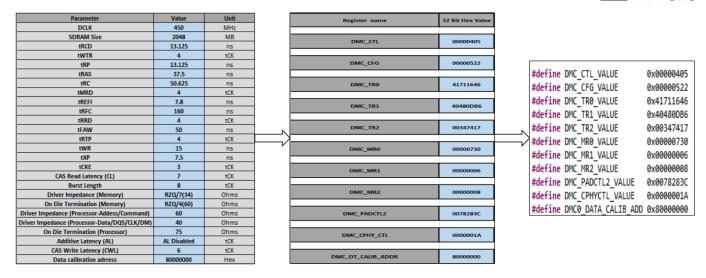


Figure 3. Deriving DMC Register Settings

### Validating the DMC Interface

Once the DMC is initialized, it is important to validate it. It is recommended to check whether or not all the DMC registers have been initialized to the correct values, if there are any basic issues with the DMC hardware interface, and whether or not the DMC has indeed been correctly initialized by the software.

The DMCInit\_Debug.c and DMCInit\_Debug.h files in the associated ZIP file provide some assistance for performing this validation. The Print\_DMC\_Register\_Contents() function can be used to print the DMC controller and PHY register values, and the Memory\_Sweep\_Test() function can be used to check whether or not both core and DMA (MDMA0) accesses to the DMC are working for different data word sizes (8-/16-/32-/64-bit and 32-byte DMA) and for different data patterns (0x0, 0xF, 0x5, 0xA, incremental, random, and all bits toggling). Figure 4 shows how the main.c file in the DDR3\_Init\_Core1 folder uses these functions to validate the DMC interface. The memory sweep size used in this code is 0x100000 (1 MB), which can be changed to validate the full DMC memory range (for example, 2 Gb = 256 MB).



```
Word size = 8 bits
                                                             DMC0 CTL = 0x401
                                                                                                   Core Test
                                                             DMC0_CFG = 0x522
                                                             DMC0 TR0 = 0x4150f646
                                                             DMC0 TR1 = 0x40400c30
                                                                                                   Data pattern = All ZEROS
                                                             DMC0 TR2 = 0x336414
                                                                                                   Test Passed...
                                                             DMC0MR = 0x530
                                                                                                   Data pattern = All ONEs
                                                             DMC0 MR1 = 0x6
                                                                                                   Test Passed...
                                                             DMC0 MR2 = 0x8
                                                             DMC0 DCLLCTL = 0x948
                                                             DMC0_PHY_CTL0 = 0xf
                                                                                                   Data pattern = All A
                                                             DMC0 PHY CTL1 = 0x0
                                                                                                   Test Passed...
                                                             DMC0_PHY_CTL2 = 0xfc000000
                                                                                                   Data pattern = All 5
                                                             DMC0 PHY CTL3 = 0xa0000c0
//Print DMC register contents for both the DMCs
                                                                                                   Test Passed...
                                                             DMC0 PHY CTL4 = 0x0
Print DMC Register Contents(0);
                                                             DMC0 CAL PADCTL0 = 0xf0000000
Print_DMC_Register_Contents(1);
                                                             DMC0_CAL_PADCTL2 = 0x78283c
                                                                                                   Data pattern = INCREMENTAL
                                                                                                   Test Passed...
                                                             DMC1_CTL = 0x401
printf("\nTesting for DMC0...\n");
                                                             DMC1\_CFG = 0x522
failure=Memory_Sweep_Test(DMC0_START_ADDRESS, 0x100000);
                                                                                                   Data pattern = RANDOM
                                                             DMC1 TR0 = 0x4150f646
                                                             DMC1_TR1 = 0x40400c30
                                                                                                   Test Passed...
printf("\nTesting for DMC1...\n");
                                                             DMC1_TR2 = 0x336414
failure=Memory_Sweep_Test(DMC1_START_ADDRESS, 0x100000);
                                                                                                   Data pattern = ALL_BITS_TOGGLING
                                                             DMC1 MR = 0x530
                                                             DMC1 MR1 = 0x6
                                                                                                   Test Passed...
if(failure==0)
                                                             DMC1_MR2 = 0x8
   printf("\nTest passed...\n");
                                                             DMC1 DCLLCTL = 0x948
else
                                                             DMC1_PHY_CTL0 = 0xf
   printf("\nTest failed...\n");
                                                                                                   Data pattern = All ZEROS
                                                             DMC1_PHY_CTL1 = 0x0
                                                             DMC1_PHY_CTL2 = 0xfc000000
                                                                                                   Test Passed...
                                                             DMC1_PHY_CTL3 = 0xa0000c0
                                                                                                   Data pattern = All ONEs
                                                             DMC1_PHY_CTL4 = 0x0
                                                             DMC1 CAL PADCTL0 = 0xf0000000
                                                                                                   Test Passed...
                                                             DMC1_CAL_PADCTL2 = 0x78283c
                                                             Testing for DMC0...
                                                                                                   Data pattern = All A
                                                                                                   Test Passed...
                                                                                                   Data pattern = All 5
                                                                                                   Test Passed...
          main c
                                                                             Output console
```

Figure 4. Validating the DMC Interface

### Creating Preload and Initialization Code with Customized CGU and DMC Settings

Preload and initialization code are two concepts that are related to configuring the CGU and DMC prior to the application code running, depending on whether performing active debug via the emulator or controlling the boot stream for a stand-alone application.

### Preload Code

When performing active debug on a target platform, an emulator is used. To make working with the board as transparent as possible for the user, the CrossCore® Embedded Studio (CCES) tools automate initialization of the CGU/DMC hardware such that applications can be built and loaded to off-chip memory for use in a debug session on the targeted board. This is done via *Preload Code*, and there are examples in the Custom Preload Codes folder for each of DDR2, DDR3, and LPDDR in the associated ZIP file<sup>[6]</sup>. When the project is built, the associated executable file (DXE) is used by CCES (as shown in Figure 5) to initialize the CGU and DMC before loading the actual application using the emulator.



Figure 5. Preload Code Being Used for the ADSP-SC589 EZ-Board



#### Initialization Code

Unlike preload code, initialization code is actually a part of the application. It is separate from the application itself, and its DXE output is pre-pended to the application's DXE file when CCES assembles the loader stream (LDR) that the processor parses during the boot process. This separate DXE is called the *Initialization Block* in the LDR file. The DXE is booted first into on-chip memory and is then executed before any attempts are made to resolve anything to the external DDR space. It is the ideal place for configuring the CGU and DMC in advance of trying to boot to DDR memory. In the Custom Init Codes folder in the associated ZIP file<sup>[6]</sup>, there are projects for DDR2, DDR3, and LPDDR. The DXE output corresponding to the project can be used as the default initialization code when generating an LDR file by pointing to the DXE in the Loader Options page of the Project Properties. See Figure 6.



Figure 6. Initialization Code Selection in the Loader Options

Typically, for applications requiring a one-time CGU and DMC initialization after reset, the preload (when loading the application via emulator) or initialization code (when booting the application standalone) should be sufficient. Thus, it is important to understand how to use and modify the default preload and initialization code for customized CGU/DMC settings.

#### Default Preload and Initialization Code

The CCES installation provides the DXE files produced by the default preload and initialization code for both the ADSP-SC589, ADSP-SC584 and ADSP-SC573 evaluation platforms in the directory:

<CCES Root>\Analog Devices\CrossCore Embedded Studio 2.2.0\SHARC\ldr

The corresponding source code and project files can be found in the \init code\ subdirectory.

The default CGU configuration which the DMC initialization code is designed for is as follows:

- 1. ADSP-SC589 EZ-Board Micron MT41K128M16-125 DDR3 device<sup>[7]</sup> with:
  - PLLCLK = CCLK = DCLK = 450 MHz
  - SYSCLK = 225 MHz
  - SCLK0 = SCLK1 = 112.5 MHz
- 2. ADSP-SC584 EZ-Board Micron MT47H128M16RT-25E XIT:C DDR2 device<sup>[8]</sup> with:
  - PLLCLK = CCLK = DCLK = 400 MHz
  - SYSCLK = 200 MHz
  - SCLK0 = SCLK1 = 100 MHz
- 3. ADSP-SC573 EZ-Board Micron MT41K128M16-125 DDR3 device<sup>[7]</sup> with:
  - PLLCLK = CCLK = DCLK = 450 MHz
  - SYSCLK = 225 MHz
  - SCLK0 = SCLK1 = 112.5 MHz



### Modifying Default Preload and Initialization Code for Customized CGU/DMC Settings

The CGU and DMC settings in the default preload and initialization source code may need to be modified for the following conditions:

- 1. When using the EZ-Board (or a custom board with the same DDR memory device as that populated on the EZ-Board) with non-default CGU settings.
- 2. When using a custom board with a different memory device.

For example, the following steps can be followed to modify the default preload code in the sc589\_preload\_core0 directory in CCES to interface the ADSP-SC589 processor to a Micron MT46H128M16LFDD-48 LPDDR memory device<sup>[9]</sup> with a DCLK of 200 MHz:

- 1. Copy the sc589\_preload\_Core0 and src folders from \ldr\init\_code\SC58x\_Init and paste them to a new folder called SC589 LPDDR.
- 2. Create a workspace in the new SC589\_LPDDR folder and import the sc589\_preload\_Core0 project into the workspace.
- 3. Replace the DMCInit.c and DMCInit.h files in the init\_src folder with the ones provided in the associated ZIP file<sup>[6]</sup>.
- 4. In the project properties window, remove the DMCInit.c and DMCInit.h files from the filter, as shown in Figure 7:

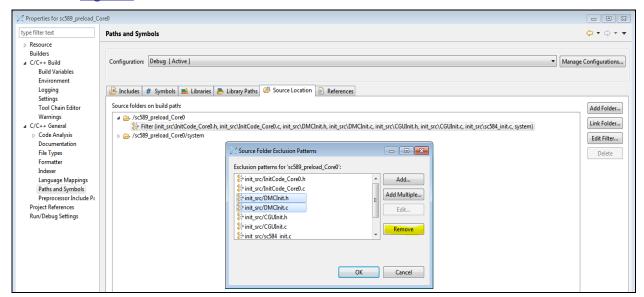


Figure 7. Modifying Project Options for Building Custom ADSP-SC589 Preload Code

- 5. Modify the CGU settings in the sc58x\_init.h file to generate CCLK = 400 MHz, SYSCLK = 200 MHz, SCLK = 100 MHz, and DCLK = 200 MHz. As shown in <u>Figure 8</u>, MSEL is modified from 18 to 16, and DSEL is modified from 1 to 2 to achieve these settings.
- 6. Add the customized DMC register settings in the sc58x\_init.h file, and replace the DMC initialization portion of the code for both DMC0 and DMC1 under the conditional build \_\_CONFIG\_DMC0\_\_ and \_\_CONFIG\_DMC1\_\_ macros, respectively. Be sure to also verify that the DMC PARAM DMC Param List variable is defined, as shown in Figure 8.



```
DMC PARAM DMC Param List;
                                                                                         #if defined(__CONFIG_DMC0__)
                                                                                               /Initialize the DMC par
                                                                                              DMC_Param_List.dmc_no=0;
                                                                                              DMC Param_List.ddr_mode=LPDDR_MODE;
DMC_Param_List.phy_init_required=true;
DMC_Param_List.cclk_dclk_ratio=2;
                                                                                              DMC_Param_List.anomaly_20000037_applicable=true;
                                                                                              DMC_Param_List.dmc_ctl_value=DMC_CTL_VALUE;
/* default power settings */
                                             /* default power settings */
                                                                                              DMC_Param_List.dmc_cfg_value=DMC_CFG_VALUE;
#define DF DEFAULT
                           (0x0u)
                                             #define DF_DEFAULT
                                                                                              DMC_Param_List.dmc_tr0_value=DMC_TR0_VALUE;
#if defined (__ADSPSC584_
#define MSEL_DEFAULT (
                                             #if defined (__ADSPSC584
                                                                                              DMC_Param_List.dmc_tr1_value=DMC_TR1_VALUE;
                                             #define MSEL_DEFAULT
                                                                        (0x10u)
                                                                                              DMC_Param_List.dmc_tr2_value=DMC_TR2_VALUE;
                                             #else
                                                                                              DMC_Param_List.dmc_mr0_value=DMC_MR0_VALUE;
#define MSEL_DEFAULT
                                             #define MSEL_DEFAULT
                                                                        (0x10u)
                                                                                              DMC_Param_List.dmc_mr1_value=DMC_MR1_VALUE;
#endif
                                                                                              DMC_Param_List.dmc_mr2_value=DMC_MR2_VALUE;
DMC_Param_List.padctl2_value=DMC_PADCTL2_VALUE;
#define SYSSEL DEFAULT
                           (0x2u)
                                             #define SYSSEL DEFAULT
                                                                         (0x2u)
#define S0SEL_DEFAULT
                           (0x2u)
                                             #define S0SEL_DEFAULT
                                                                         (0x2u)
                                                                                              DMC_Param_List.dmc_cphyctl_value=DMC_CPHYCTL_VALUE;
#define S1SEL_DEFAULT
                           (0x2u)
                                             #define S1SEL DEFAULT
                                                                        (0x2u)
                                                                                              DMC_Param_List.dmc_data_calib_add_value=DMCO_DATA_CALIB_ADD;
#define CSEL_DEFAULT
                           (0x1u)
                                             #define CSEL DEFAULT
                                                                         (0x1u)
#define DSEL DEFAULT
                           (0x1u)
                                             #define DSEL_DEFAULT
                                                                        (0x2u)
                                                                                              //Initialize DMC0 now
                                                                                              DMCInit(DMC Param List);
          Default CGU Settings
                                                   Customized CGU Settings
                                                                                         #endif // __CONFIG_DMC0_
                                                                                         #if defined( CONFIG DMC1 )
                                                                                              //Initialize the DMC parameters list
                                                                                              DMC_Param_List.dmc_no=1;
                                                                                              DMC_Param_List.ddr_mode=LPDDR_MODE;
      #define DMC_CTL_VALUE
                                      0x00002406
                                                                                             DMC_Param_List.phy_init_required=true;
DMC_Param_List.cclk_dclk_ratio=2;
      #define DMC_CFG_VALUE
                                      0x00000522
                                                                                              DMC_Param_List.anomaly_20000037_applicable=true;
DMC_Param_List.dmc_ctl_value=DMC_CTL_VALUE;
      #define DMC_TR0_VALUE
                                      0x20B08323
      #define DMC_TR1_VALUE
#define DMC_TR2_VALUE
                                      0x200F0618
                                      0x00123000
                                                                                              DMC_Param_List.dmc_cfg_value=DMC_CFG_VALUE;
      #define DMC_MR0_VALUE
                                      0x00000032
                                                                                              DMC_Param_List.dmc_tr0_value=DMC_TR0_VALUE;
      #define DMC_MR1_VALUE
                                                                                              DMC_Param_List.dmc_tr1_value=DMC_TR1_VALUE;
      #define DMC_MR2_VALUE
                                                                                              DMC_Param_List.dmc_tr2_value=DMC_TR2_VALUE;
      #define DMC_PADCTL2_VALUE
#define DMC_CPHYCTL_VALUE
                                      0
                                                                                              DMC_Param_List.dmc_mr0_value=DMC_MR0_VALUE;
                                      0x00000000
                                                                                              DMC_Param_List.dmc_mr1_value=DMC_MR1_VALUE;
      #define DMC0_DATA_CALIB_ADD 0x80000000
                                                                                              DMC_Param_List.dmc_mr2_value=DMC_MR2_VALUE;
      #define DMC1_DATA_CALIB_ADD 0xC0000000
                                                                                              DMC Param List.padctl2 value=DMC PADCTL2 VALUE;
                                                                                              DMC_Param_List.dmc_cphyctl_value=DMC_CPHYCTL_VALUE;
                                                                                              DMC_Param_List.dmc_data_calib_add_value=DMC1_DATA_CALIB_ADD;
                                                                                              //Initialize DMC01 now
                 "sc58x_init.h" modifications
                                                                                              DMCInit(DMC_Param_List);
                                                                                                                                   "sc58x_init.c" modifications
```

Figure 8. Modifying Source Code Files for Customized CGU/DMC Settings

7. Now build the project, and the customized preload DXE file is available in the \Debug folder.

Similarly, the preload code for the ADSP-SC584 evaluation platform, the ADSP-SC573 evaluation platform and the initialization code for the ADSP-SC589, ADSP-SC584 and ADSP-SC573 evaluation platforms can be modified for any customized CGU and DMC settings.

#endif // \_\_CONFIG\_DMC1\_\_



Although this EE-note provides guidance to customize the preload and initialization code for the ADSP-SC589 (DDR3 and LPDDR modes), ADSP-SC584 (DDR2 mode) and ADSP-SC573 (DDR3,DDR2 and LPDDR modes) processors, the examples should be used only as a reference to understand the procedure. It is the user's responsibility to ensure that the latest preload and initialization code from the CCES installation is the starting point and careful modification is performed when making the required customization to support the desired CGU/DMC settings of the end application.



### **Frequently Asked Questions**

**Question 1:** I am using the same DDR device as used on the EZ-Board, but I want to run the DMC at a different DCLK value than the EZ-Board. What do I need to take care of when initializing the DMC?

Answer: Just change the DCLK parameter value in the DMC\_Registers\_List.xlsx spreadsheet and copy the generated DMC register values into the main.h file of the corresponding example DMC initialization code provided in the associated ZIP file<sup>[6]</sup>. For example, Figure 9 shows how to generate and use the DMC register values for the Micron MT41K128M16-125 DDR3 device with a DCLK frequency of 400 MHz instead of 450 MHz.

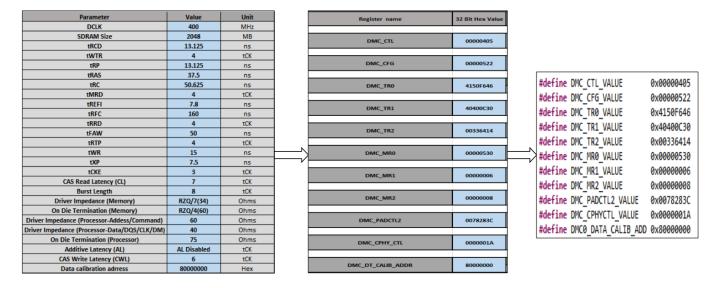


Figure 9. Generating DMC Register Values for the MT41K128M16-125 DDR3 Memory Device w/ DCLK = 400 MHz

**Question 2:** I am using the ARM core, and all my data and code is in the external DDR memory. How can I re-initialize the DMC with a non-default DCLK value without affecting the memory contents?

Answer: To make sure that the code/data in the DMC is retained, initialize the CGU using the steps mentioned in the On-the-Fly DMC Re-Initialization section of this EE-note. By default, the linker file for the ARM core on the ADSP-SC5xx processors puts all the code and data in the L3 (DMC) space. Thus, a custom linker file is required to place the complete CGU and DMC re-initialization code into non-L3 (DDR) space (for example, L2). The DDR3\_Re\_Initialization\_ARM\_Core0 code example in the associated ZIP file<sup>[6]</sup> illustrates how to reinitialize the DMC through the ARM core to run the DCLK at 400 MHz instead of the default DCLK frequency of 450 MHz.

**Question 3:** Do I need to re-initialize PHY registers each time I reinitialize the DMC dynamically in my code?

**Answer:** PHY registers do not need to be initialized every time the DMC is reinitialized, unless the pads need to be calibrated to a different driver impedance and/or ODT.



Question 4: Can I run the DDR device at a DCLK of 400 MHz and still run the core at 450 MHz?

Yes, this is possible using two CGUs. One CGU can generate a CCLK of 450 MHz (for example, with SYSCLK = 225 MHz and SCLK = 112.5 MHz), and the other CGU can generate a DCLK at 400 MHz. The DDR2\_Init\_Two\_CGU\_Core1 example in the associated ZIP file<sup>[6]</sup> illustrates how to configure the DDR2 device on the ADSP-SC584 EZ-Board with a DCLK of 400 MHz while maintaining a CCLK of 450 MHz.

**Question 5:** Does the controller perform only a one-time DLL calibration during DMC initialization?

**Answer:** No, during initialization, the controller does a coarse DLL calibration. During runtime, the controller continues with fine calibration during auto-refresh commands and continues to update the corresponding calibration registers automatically to accommodate for temperature/PCB changes during runtime.

# **Hardware Considerations**

Standard DDR interface board design guidelines are presented in this section to have optimal ADSP-SC5xx DMC interface signal and power integrity.

### **Placement and General Routing Guidelines**

- Place the ADSP-SC5xx and the DDR3/DDR2/LPDDR memory as close as possible to each other, as this reduces routing length.
- The ADSP-SC5xx DMC interface supports only point-to-point design and does not support fly-by topology.
- Plan the stack-up such that all the DDR3/DDR2/LPDDR signals have continuous and immediate reference planes, and ensure that they do not cross splits.
- The DDR3/DDR2/LPDDR address, command, and control signals can use an even power plane as a reference. Ensure that there are no splits or discontinuities in the referenced power plane.
- The PCB trace characteristic impedance must be 50  $\Omega$  for single-ended signals and 100  $\Omega$  for differential signals.
- Route all the DDR signals as a group in each and every layer to avoid a mismatch in trace impedance and propagation delay.
- Ensure that the DDR signals are routed as groups and that signals within groups do not change layers.
  - o For example, the DMC\_DQ00-07, DMC\_LDQS, and DMC\_LDQM signals should be routed as a group, in the same layer and having the same reference. Changing the reference plane can change the trace impedance.
- To avoid crosstalk, ensure that all DDR signals have sufficient center-to-center spacing of at least 3W between DDR signals and 4W to other signals.
- Maintain perpendicularity between DMC signal routing if the DMC signals are routed in the adjacent layers. This configuration reduces crosstalk, as signals on adjacent layers will not be parallel to each other.



Avoid test points on the DDR signals, as they create stubs which can act as an EMI source. Instead, use vias for probing or JEDEC-recommended methods that DDR memory vendors offer for diagnostics.

### **Trace Length Matching Criteria**



The routing of all the DDR interface signals must be length-matched to avoid set-up and hold time violations due to propagation delay.

The length-matching criteria are as follows:

- Match the trace length of all address (DMC\_A[nn], DMC\_BA[n]) and command (DMC\_CKE, DMC\_CS[n], DMC ODT, DMC RAS, DMC RESET, DMC WE) signals within +/- 40 mils relative to the DMC CK signal.
- Match the trace length of all data (DMC\_DQ[nn]) and data mask (DMC\_UDM, DMC\_LDM) signals within +/-40 mils relative to their corresponding DQS signal.
  - O For example, the lower order data byte (DMC\_DQ00 DMC\_DQ07) and the corresponding data mask (DMC\_LDM) signals should be length-matched with the lower order strobe (DMC\_LDQS) signal.
- The differential signals such as clock (DMC\_CK and /DMC\_CK) and DQS pairs (DMC\_LDQS and /DMC LDQS, DMC UDQS and /DMC UDQS) should be length-matched within +/-10 mils.
  - O For example, the trace length of the DMC\_CK and /DMC\_CK signals should be matched within +/- 10 mils relative to each other.
- The maximum allowed trace length for DDR signals is 2 inches.

#### **Interface Termination**



All the DDR interface signals without ODT require external termination for improved signal integrity.

The termination guidelines are as follows:

- Install a 100  $\Omega$  termination resistor on the differential clock between DMC\_CK and /DMC\_CK, and place it close to the memory.
- Install external series termination resistors on all address and control signals, and place them closer to the processor.
- The value of the series termination resistors on the ADSP-SC5xx EZ-Board is 33  $\Omega$ . This value can vary based on the routing in the board. Appropriate series termination resistor values can be obtained based on simulation results of the board. The IBIS models for the ADSP-SC5xx processor can be downloaded from <a href="https://www.analog.com">www.analog.com</a>.
- The DDR2/3 data group signals do not require external termination, as they have ODT.
- The ODT value can obtained based on simulation results of the board. IBIS models for the ADSP-SC5xx processor can be downloaded from <a href="https://www.analog.com">www.analog.com</a>.



• For the LPDDR interface, it is advisable to also install termination resistors for data signals, as ODT is not supported for LPDDR mode.

### DMC Power (VDD DMC) Decoupling



The DMC interface should have sufficient decoupling on the VDD\_DMC rail and the memory power rail to avoid data corruption.

- Use the ADSP-SC589 EZ-Board<sup>[3]</sup>/ADSP-SC584 EZ-Board<sup>[4]</sup>/ADSP-SC573 EZ-Board<sup>[16]</sup> schematics as a reference to identify the decoupling capacitor quantity and values for the ADSP-SC5xx VDD\_DMC rail.
- Refer to the DDR memory datasheet or consult the DDR memory vendor to identify the decoupling capacitor requirement for the DDR memory power rails. A critical parameter is Idd7, which defines the peak current during multi-bank operation, depending on the speed grade and ambient temperature of the DDR memory.
- Place all the decoupling capacitors very near to the VDD\_DMC power rail and use a solid power/ground plane.
- Ensure that the power and ground planes are adjacent to each other to provide the shortest return path, as well as higher capacitance.
- Have individual power and ground vias for every power and ground pin of the ADSP-SC5xx processor and the memory device to its associated plane.
- Place the decoupling capacitors for the VDD\_DMC power rail as close as possible to the pin. This is very important, as DDR signal slew rates are really aggressive, so having these capacitors closer to the pin is a must (Figure 10).



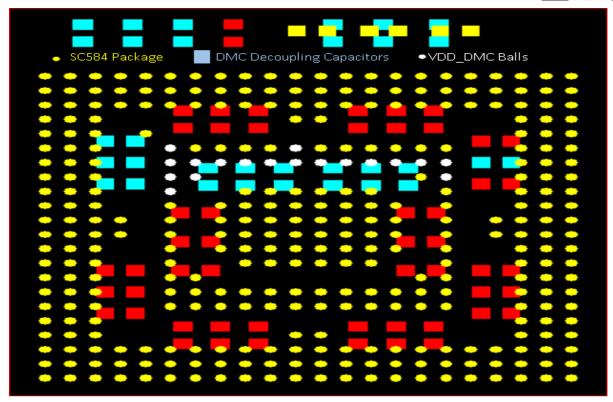


Figure 10. Sample VDD DMC Decoupling Capacitor Placement for the ADSP-SC584 Device

- Have dedicated power and ground vias for each decoupling capacitor pin. Sharing of vias is not allowed.
- Ideally, the trace length from the power via to the device pad should not exceed 30 mils. The maximum trace length from power via to bypass capacitor is 60 mils. The maximum trace length from power via to power ball pad is 35 mils.
- Placement of the mid-bulk bypass capacitors (10 µF) is not that critical, and they can be placed to accommodate other circuitry with more constrained placement and routing requirements.

### **Clean DMC VREF Voltage Supply**



DMC\_VREF acts as a voltage reference for DDR2/3 data signals and compares the difference between a steady reference voltage (VREF) and the signal received for identifying the logic. Hence, it is recommended to have them clean and noise-free.

- Route the DMC\_VREF trace away from high-speed signals and noisy power supplies with a distance of at least 40 mil.
- Guard traces can be provided around the DMC\_VREF trace, if required. Ensure that the guard traces have sufficient ground vias stitched to the main ground plane.
- Provide adequate decoupling near the DMC\_VREF pins of the ADSP-SC5xx processor, as well as the memory device.



• Keep the DMC\_VREF trace as short as possible with a width of at least 20 mils.

### Recommended ADSP-SC5xx DMC\_VREF Filtering Scheme

• The RCR filtering scheme on DMC\_VREF is recommended for ADSP-SC5xx products, as shown in Figure 11.

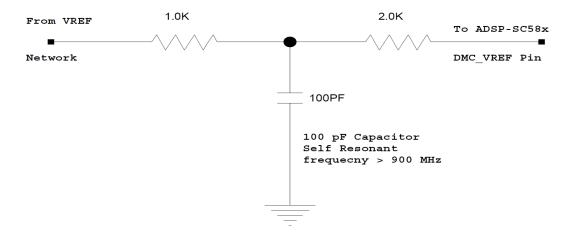


Figure 11. Recommended DMC\_VREF Filtering Network

### PCB Placement and Routing Guidelines for the DMC\_VREF Filter Network

• Place the recommended RCR network between the DMC\_VREF supply paths from the memory to the processor, as shown in <u>Figure 12</u>. For more details, refer to the ADSP-SC589 EZ-Board schematics<sup>[3]</sup>.

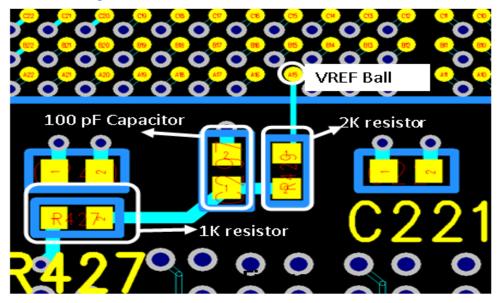


Figure 12. Recommended Placement and Routing for DMC\_VREF Filtering Network

• Place the C(100 pF)-R(2 k $\Omega$ ) portion of the RCR network as close as possible to the ADSP-SC5xx DMC VREF pin.



- Use a small package, preferably 0402 size, for the 100pF capacitor to guarantee a high self-resonant frequency.
- Place the entire RCR network in one layer with no vias allowed in the trace.

### Memory-Side Recommendations for VREF Supply

There are unique requirements for the VREF supply, depending on whether the design is for DDR2 or DDR3 memory.

### **VREF Supply Recommendations for DDR3 Mode**

- DDR3 memory has two VREF pins: VREFCA and VREFDQ. VREFCA serves as the reference for clock, address, command, and control signals, and VREFDQ serves as the reference for strobe, data, and data mask signals.
- VREFCA and VREFDQ can have a common supply source but should be "STAR" routed and decoupled at the dedicated DRAM pins.
- Place two decoupling capacitors, 0.1 μF and 0.01 μF, for each VREF pin (VREFCA and VREFDQ).
- Place the 0.01 μF capacitor closer to the DRAM pin, followed by the 0.1 μF capacitor.
- Keep the length from the decoupling capacitor to the DRAM pin short with a wide trace.

Figure 13 shows the recommended VREF supply circuit for a DDR3 memory device.

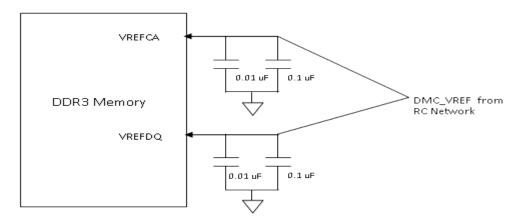


Figure 13. Recommended VREF Supply Circuitry for DDR3 Memory Device

### **VREF Supply Recommendations for DDR2 Mode**

- DDR2 memory has only one VREF pin. Add 0.01 μF and 0.1 μF decoupling capacitors on VREF close to the DDR2 SDRAM.
- Place the 0.01 µF capacitor closer to the DRAM pin, followed by the 0.1 µF capacitor.

Figure 14 shows the VREF supply circuitry used on the ADSP-SC589 EZ-Board for DDR3 mode, and Figure 15 shows the same for the ADSP-SC584 EZ-Board for DDR2 mode.



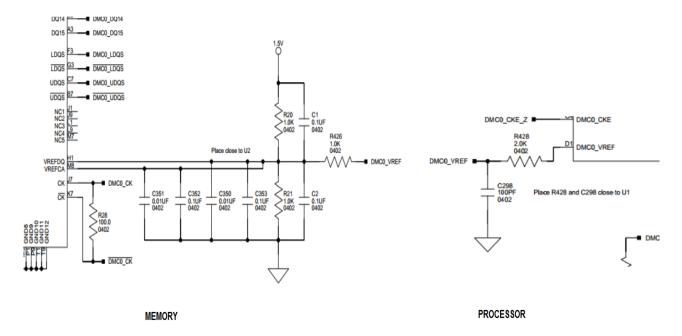


Figure 14. DMC\_VREF Circuit for DDR3 Mode on the ADSP-SC589 EZ-Board

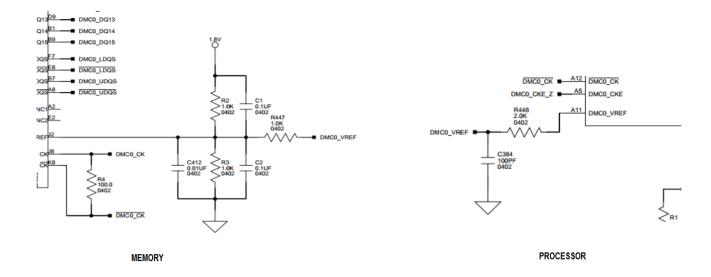


Figure 15. DMC\_VREF Circuit for DDR2 Mode on the ADSP-SC584 EZ-Board

### Recommendation for differential signals

To meet JEDEC standard, the circuits shown in <u>Figure16</u> and <u>Figure17</u> are recommended for clock and DQS signals.

#### Clock Recommendation

For DDR2 and DDR3 mode, the DMC\_CK signal requires a pull-up resistor and the DMC\_CK# signal requires a pull-down resistor that is placed close to the memory.






Figure 16. Clock Signal

### **DQS** Recommendation

For DDR3 mode only, the DMC\_UDQS/DMC\_LDQS signal requires a pull-up resistor and the DMC\_UDQS#/DMC\_LDQS# signal requires a pull-down resistor closest to the memory.

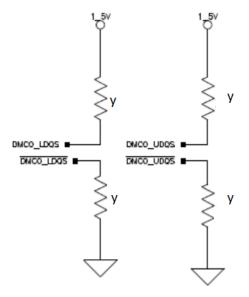


Figure 17: DQS Signal





The recommended values of resistor "x" and resistor "y" are  $680\Omega$  and  $1200\Omega$ , respectively, for ADSP-SC58x processors and  $300\Omega$  and  $390\Omega$ , respectively, for ADSP-SC57x processors.

### References

- [1] ADSP-SC582/SC583/SC584/SC587/SC589/ADSP-21583/21584/21587 SHARC+ Dual-Core DSP with ARM Cortex-A5 Data Sheet. Rev C, June 2023. Analog Devices, Inc.
- [2] ADSP-SC58x/ADSP-2158x SHARC+ Processor Hardware Reference Manual, Rev 1.0, September 2017. Analog Devices, Inc.
- [3] ADSP-SC589 EZ-Board® Evaluation System Manual, Rev 1.0.0, May 2015. Analog Devices, Inc.
- [4] ADSP-SC584 EZ-Board® Evaluation System Manual, Rev 1.0.0, May 2015. Analog Devices, Inc.
- [5] ADSP-SC582/583/584/587/589/ADSP-21583/584/587 SHARC+ Dual-Core DSP with ARM Cortex-A5 Silicon Anomaly List. Rev F, April 2023. Analog Devices, Inc.
- [6] Associated ZIP File (EE387v04.zip) for Interfacing DDR3/DDR2/LPDDR Memory to ADSP-SC5xx/215xx Processors (EE-387). February 2024. Analog Devices, Inc.
- [7] MT41K128M16 DDR3L SDRAM Data Sheet. Rev K, September2013. Micron Technology, Inc.
- [8] MT47H128M16 DDR2 SDRAM Data Sheet. Rev H, November 2010. Micron Technology, Inc.
- [9] MT46H128M16LF LPDDR SDRAM Data Sheet. Rev F, September2014. Micron Technology, Inc.
- [10] ADSP-2146x Board Design Guidelines for DDR2 Memory (EE-349). Rev 3, November 2012. Analog Devices, Inc.
- [11] Hardware Tips for Point-to-Point System Design (TN-46-14). Rev B, June 2008. Micron Technology, Inc.
- [12] USER'S MANUAL: New Features of DDR3 SDRAM. Ver.1.0, 2009. © Elpida Memory, Inc.
- [13] ADSP-SC57x/ADSP-2157x SHARC+ Processor Hardware Reference Manual, Rev 1.1, January 2020. Analog Devices, Inc.
- [14] ADSP-SC570/SC571/SC572/SC573 /ADSP-21571/21573 SHARC+ Dual-Core DSP with ARM Cortex-A5 Data Sheet. Rev B, June 2018. Analog Devices, Inc.
- [15] ADSP-SC570/571/572/573/ADSP-21571/573 SHARC+ Dual-Core DSP with ARM Cortex-A5 Silicon Anomaly List. Rev G, April 2023. Analog Devices, Inc.
- [16] ADSP-SC573 EZ-Kit® Evaluation System Manual, Rev 1.0.0, June 2016. Analog Devices, Inc.



# **Document History**

Revision	Description
Rev 4 – February 29th, 2024 by Mitesh Moonat	Updated "Figure 2. DMC Programming Model Flow Chart" and "DMC Controller Initialization" section to move the programming of DMCx_DLLCTL register step before setting DMCx_CTL.INIT bit.
Rev 3 – April 1st, 2018 by Sachin-V Kumar	Added a new note in "Trace length matching criteria" section
	Added a correction to a note in "Trace length matching criteria" section
	Changed "Listing.1 CGU initialization"
	Added new section "Recommendation for differential signals"
	Minor changes in example codes
Rev 2 – June 25th, 2016 by Sachin-V Kumar	Added descriptions to include ADSP-SC57x and ADSP-2157x series processors
	Added example codes for ADSP-SC57x series processors
Rev 1 – December 17th, 2015 by Balaji Kannan, Mitesh Moonat, and Gaurav Singh	Initial Release