
TMC-UPS-2A24V-A-EVAL Evaluation Board

Hardware Version V1.00 | Document Revision V1.01 • 2021-JUN-16

The TMC-UPS-2A24V-A-EVAL is a universal Power Stage for usage with TMC4671-Eval. It drives up to 2A of current and is tolerant to supply voltages up to 24V. It uses half bridge gate drivers and discrete MOSFETs as well as standard connectors for supply and motor connection. Current measurement is implemented by inline shunt amplifiers.

Features

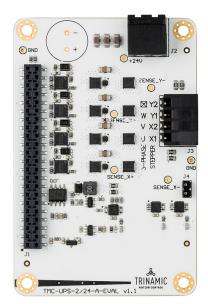

Applications

- Laboratory Automation
- Manufacturing
- Semiconductor Handling
- Robotics
- Factory Automation
- Test & Measurement

• Life Science

 Power Stage for the TMC4671-EVAL
 4 independent Half-Bridges with Gate Driver and Phase Current up to 2A RMS for driving a 2-phase stepper motor, or a 3-phase BLDC or a sin-


Main Supply Voltage (VM) up to 24V
Supply for Gatedrivers and Shunt Amplifiers (zero current level = 5.0V/2)

• 2 Phase Current shunt amplifiers and one for bottom shunt with +/-2A mea-

gle phase DC motor.

surement range

- Biotechnology
- Biotechnology
- Liquid Handling

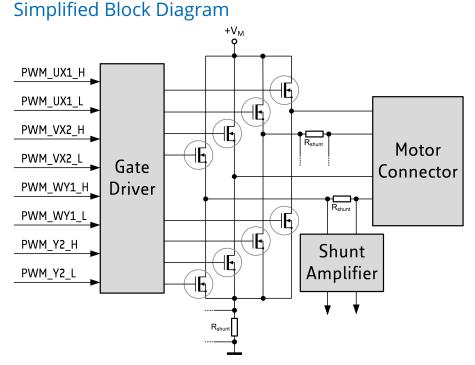

©2021 TRINAMIC Motion Control GmbH & Co. KG, Hamburg, Germany Terms of delivery and rights to technical change reserved. Download newest version at: www.trinamic.com



3

Contents

1	Getting Started	3
2	Hardware Information 2.1 Connectors	3 3
3	Usage with own Motion Controller	4
4	Supply Voltage for Shunt Amplifiers	5
5	Revision History 5.1 Document Revision	6 6



1 Getting Started

The TMC-UPS-2A24V-A-EVAL is a power stage module to be used in the TMC4671 Evaluation Kit. It is based on the TMC-UPS-2A24V-EVAL V1.10.

Please assemble all components properly according to guidelines in the respective Motion Controller Evaluation Board Manual.

2 Hardware Information

All design files for our evaluation boards are available for free. We offer the original ECAD files, Gerber data, the BOM, and PDF copies. Typically, the ECAD files are in KiCAD format. Some (older) evaluation boards may only be available in Eagle, Altium, or PADS format.

Please check schematics for Jumper settings and input/output connector description.

The files can be downloaded from the evaluation boards' website directly at https://www.trinamic.com/support/eval-kits/.

Note If files are missing on the website or something is wrong please send us a note.


2.1 Connectors

The TMC-UPS-2A24V-A-EVAL provides a motor connector, a power supply connector and a Evaluation system compliant connector to a motion controller Evaluation board. Please check silk screen for correct motor connection.

uC or Motor Controller Connector J1 43 44 GND GND 41 42 **DI019** D+5V+5V39 40 **DIO17** DIO18 37 38 **DIO15 DIO16** PWM_L_IDLE 36 35 **DIO13 DIO14** 34 PWM_H_IDLE 33 SPI1_SDO DIO12 31 32 SPI1_SCK SPI1_SDI SPI2 SDI 30 29 SPI2_SDI SPI1_CSN SPI2_SDO 27 25 SPI2 SCK 28 SPI2_SCK SPI2_SDO 26 SPI2_CSN1 SPI2_CSN2 BL4 23 24 SPI2_CSN0 BH4 CLK16 21 22 BL3 **DIO10** DIO11 BH3 19 20 BL2 DIO8 DIO9 BH2 17 18 DIO7 BL1 **DI06** BH1 15 16 IUX1 AIN2 ADC AIN1 ADC IS 13 14 DIO5 AINO ADC I W Y1 11 12 ADC_T_MOSFETS DIO3 DIO4 ADC_T_MOTOR 9 10 DIO1 DIO2 CS_CH1 8 7 ID CH1 DIO0 5 6 OEXTREF_2V5 +5V CS_CH0 4 3 GND IO_CLK 1 2 VMC VM GND HLE-122-02-F-DV

Figure 1: 44 pin Motor Controller Connector



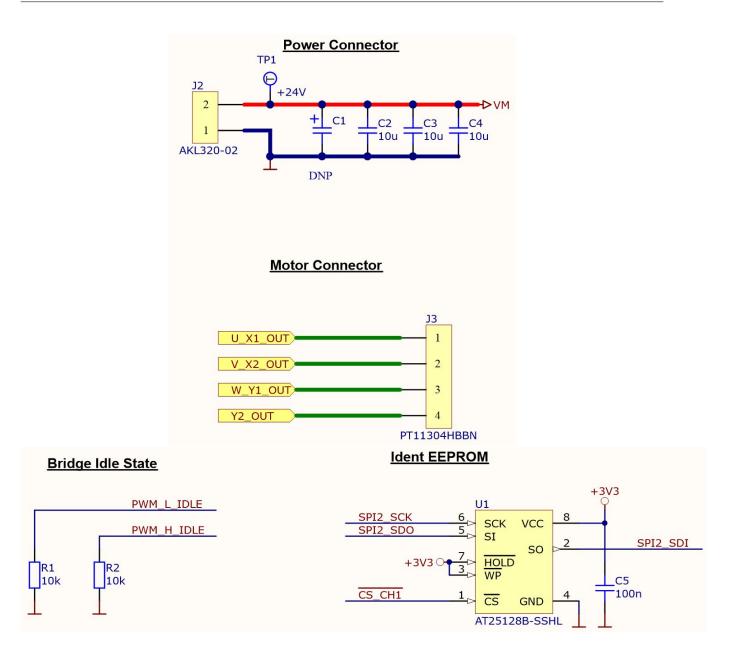

The evaluation board can be automatically recognized when Ident EEPROM is properly configured. This part is only needed on an Evaluation board for user convenience.

3 Usage with own Motion Controller

The TMC-UPS-2A24V-A-EVAL can be used with third party motor controller. In that case 5V needs to be supplied via the Motor Controller connector. SPI signals are not needed.



4 Supply Voltage for Shunt Amplifiers

With resistors R33 and R34 the supply voltage for the shunt amplifiers can be changed. The default setting is R34 = 5V, which results in a zero current offset of 5.0V/2 = 2.5V as required by TMC4671-EVAL. When using the TMC4670-EVAL or TMC8670-EVAL, R33 should be placed (0R) and R34 should not be equipped to change the zero current offset to 3.3V/2 = 1.66V.

Equipping both resistors will short supply voltages and probably damage the module. When using the TMC4670-EVAL or TMC8670-EVAL and selected supply voltage is 5V the ADC offset will not be at medium level and not the complete current range can be measured.

Shunt Amplifier power select (default +5V)

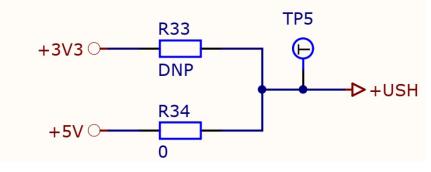


Figure 2: Power supply select for shunt amplifiers



5 Revision History

5.1 Document Revision

Version	Date	Author	Description
1.00	2019-APR-15	SK	Initial release.
1.01	2021-JUN-16	LH	Updated Evalboard image

Table 1: Document Revision

