

EVAL-AD5781ARDZ/EVAL-AD5791ARDZ

Evaluating the AD5781/AD5791 18-Bit/20-Bit, ± 0.5 LSB INL/ ± 1 LSB INL Voltage Output DACs

FEATURES

- ▶ Full featured evaluation board for the [AD5781](#) and [AD5791](#)
- ▶ [ADP5070](#) power solution generated from single 5 V supply
- ▶ Various link options
- ▶ PC control in conjunction with the Analog Devices Inc., [EVAL-SDP-CK1Z \(SDP-K1\)](#) controller board

EVALUATION KIT CONTENTS

- ▶ EVAL-AD5781ARDZ or EVAL-AD5791ARDZ evaluation board
- ▶ [EV-ADR445-REFZ](#) reference board

HARDWARE REQUIRED

- ▶ [EVAL-SDP-CK1Z \(SDP-K1\)](#) controller board, which must be purchased separately
- ▶ PC running on Windows® 10 (32-bit or 64-bit) or later

SOFTWARE REQUIRED

- ▶ [Analysis | Control | Evaluation \(ACE\) Software](#), which is also available for download from the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ product page

GENERAL DESCRIPTION

The operation of the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ for the [AD5781](#) (18-bit) and [AD5791](#) (20-bit), bipolar voltage output, digital-to-analog converters (DACs) are detailed in this user guide.

Both the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ facilitate fast prototyping of the AD5781 and AD5791 circuits, thereby reducing design time. Both the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ provides an on-board -14 V and $+14$ V dual power supply. The evaluation boards also utilizes external reference boards with an output voltage of $+10$ V and -10 V.

The EVAL-AD5781ARDZ or EVAL-AD5791ARDZ interface to the USB port of a PC via a system demonstration platform (SDP-K1) controller board. The Analysis | Control | Evaluation (ACE) software is available for download from both the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ product pages. This software enables the user to program the AD5781 and AD5791, respectively. A peripheral module interface (PMOD) connection is also available that allows the connection of different microcontrollers to the evaluation boards without the SDP-K1 controller board. Note that when a microcontroller is used through the PMOD connection, the SDP-K1 controller board must be disconnected, and the user cannot use the ACE software.

For full details, see the AD5781 or the AD5791 data sheets, which must be used in conjunction with this user guide when using the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ evaluation boards.

TYPICAL EVALUATION SETUP

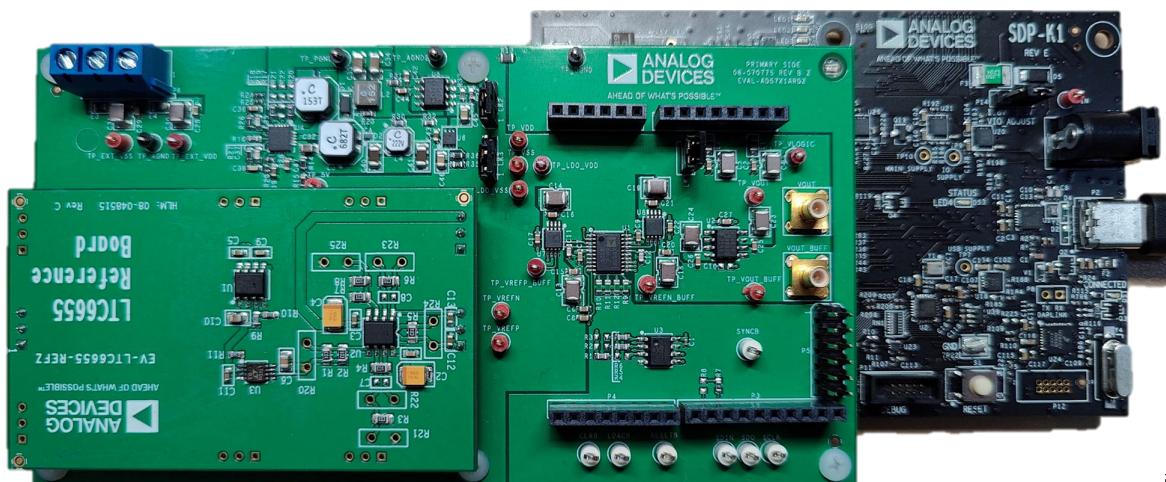


Figure 1. The EVAL-AD5781ARDZ Connected to the SDP-K1 Controller Board

001

TABLE OF CONTENTS

Features.....	1	INITIAL CONFIGURATION Tab and	
Evaluation Kit Contents.....	1	Description.....	4
Hardware Required.....	1	Memory Map.....	6
Software Required.....	1	Evaluation Board Hardware.....	7
General Description.....	1	Power Supplies.....	7
Typical Evaluation Setup.....	1	Link Options.....	7
Getting Started.....	3	On-Board Connectors.....	8
Installing the Software.....	3	Voltage Reference Daughter Boards.....	8
Initial Setup.....	3	Evaluation Board Schematics.....	9
Evaluation Software.....	4		

REVISION HISTORY

5/2024—Revision 0: Initial Version

GETTING STARTED

INSTALLING THE SOFTWARE

The EVAL-AD5781ARDZ and EVAL-AD5791ARDZ use the **ACE Software**, a software application that allows the evaluation and control of multiple evaluation systems.

The **ACE Software** is available for download from the EVAL-AD5781ARDZ and EVAL-AD5791ARDZ product page or from the **ACE Software** web page. The **ACE Software** installer installs the necessary SDP drivers and the Microsoft® .NET Framework 4 by default. The **ACE Software** must be installed before connecting the **SDP-K1** controller board to the USB port of the PC to ensure that the SDP-K1 controller board is recognized when connected to the PC. For full instructions on how to install and use this software, see the **ACE Software** web page on the Analog Devices, Inc., website.

After the installation is finished, run the ACE Software and the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ plug-in appears automatically.

INITIAL SETUP

To set up the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ, take the following steps:

1. Connect the evaluation board to the SDP-K1 controller board, and then connect the USB cable between the SDP-K1 controller board and the PC.
2. Run the **ACE Software** application. The EVAL-AD5781ARDZ or EVAL-AD5791ARDZ plug-ins appear in the attached hardware section of the **Start** tab, as shown in **Figure 2**.
3. Double-click the board plug-in to open the **Board View** seen in **Figure 3**.
4. Double-click the **AD5781** or the **AD5791** chip to access the chip block diagram shown in **Figure 4**. This view provides a basic representation of the functionality of the board, together with the **INITIAL CONFIGURATION** view. See **Figure 5** and **Table 1** for details on the registers of the board.

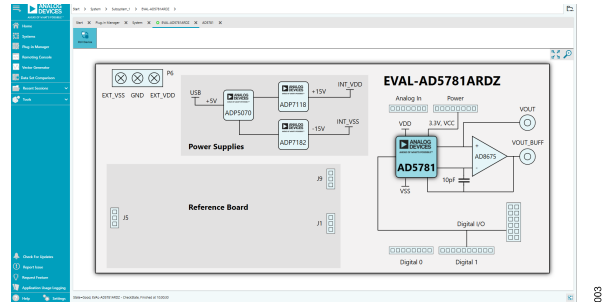


Figure 3. Board View of the EVAL-AD5781ARDZ

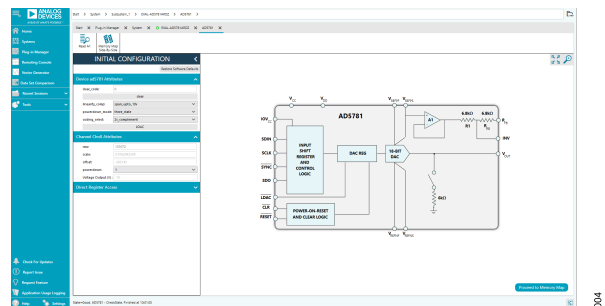


Figure 4. Chip View of the EVAL-AD5781ARDZ

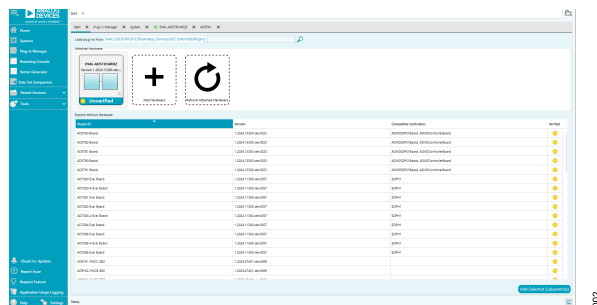


Figure 2. ACE Software Main Window

EVALUATION SOFTWARE

INITIAL CONFIGURATION TAB AND DESCRIPTION

The EVAL-AD5781ARDZ and EVAL-AD5791ARDZ software has an **INITIAL CONFIGURATION** tab. This tab provides access to the software attributes that align to the registers of the [AD5781](#) or [AD5791](#), as outlined in the AD5781 or AD5791 data sheets. This tab simplifies the process of understanding how the attributes of the software directly relate to the registers found in the data sheets. For a full description of each register and its settings, see the AD5781 or AD5791 data sheet.

Some of the functions are described in this section as these functions pertain to the evaluation board. Changes made in the registers of the **INITIAL CONFIGURATION** tab are automatically reflected in the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ.

Figure 5. AD5781 Block Diagram with the INITIAL CONFIGURATION Tab

Table 1. Register Functions

Button/Function Name	Function
INITIAL CONFIGURATION Tab	Users can initially set the default configuration for the device within this tab. These settings can be modified at any stage while evaluating the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ. The registers reflected in this window depend on the loaded firmware.
Clear_code	The clear_code register sets the value of the DAC register when the clear button is asserted. The input range for the AD5781 is from 0 to 262143 (0x0 to 0x3FFFF). The input range for the AD5791 is from 0 to 1048575 (0x0 to 0xFFFFF).
clear	Click this button for external GPIO pulses to be sent to the CLR pin.
linearity_comp	This attribute compensates for varying reference input to improve performance. AD5781 settings: span_upto_10V or span_10V_to_20V . AD5791 settings: span_upto_10V , span_12V_to_16V , span_16V_to_19V , or span_19V_to_20V .
powerdown_mode	This attribute relates to the powerdown attribute. This selects the type of power down when powerdown is 1. Selecting three_state sets the DAC output to tristate mode. Selecting 6kohm_to_gnd sets the DAC output to be clamped to ground through a 6 kΩ resistance and is placed in tristate mode.
coding_select	Use this pull-down menu to set the coding scheme of the DAC register.
LDAC	Click this button for external GPIO pulses to be sent to the LDAC pin. The LDAC button pushes data from the input register to the DAC register. In the software, this button is only required if the Direct Register Access section is used.

EVALUATION SOFTWARE

Table 1. Register Functions (Continued)

Button/Function Name	Function
raw	This field allows users to set the value of the DAC register. The input is decimal by default; however, the hexadecimal value can also be used by inserting 0x as the prefix. The input range for the AD5781 is from 0 to 262143 (0x0 to 0x3FFFF). The input range for the AD5791 is from 0 to 1048575 (0x0 to 0xFFFFF).
scale	This field allows users to represent the value of the DAC LSB in mV. This field is a read-only attribute. Note that this field is only applicable if a reference board is used.
offset	This field allows users to sets the position of the zero-scale. The unit is in code. This field is a read-only attribute. Note that this field is only applicable if a reference board is used.
powerdown	This pulldown menu allows users to power down the output stage of the device based on the setting of the powerdown_mode attribute.
Voltage Output (V)	This field represents the calculated value across the output of the DAC. This value can be computed by $(\text{raw} + \text{offset}) \times \text{scale}$. This field is a read-only attribute. Note that this is only applicable if a reference board is used.
Direct Register Access	This section can be used to manually write to or read from a register in the AD5781 or AD5791. It is recommended to use this tab for debugging purposes only, which may cause inconsistency between the value of the attributes and the DAC registers

EVALUATION SOFTWARE

MEMORY MAP

All registers are fully accessible from the **AD5781 Memory Map** or **AD5791 Memory Map** tab, see [Figure 6](#). This tab allows registers to be edited at bit level. The bits shaded in dark gray are read-only bits and cannot be accessed from the **ACE Software**. All other bits are toggled.

Click **Apply Changes** to transfer data to the device. All changes or configurations made in the **AD5781 Memory Map** or **AD5791 Memory Map** tab are not reflected to the **INITIAL CONFIGURATION** tab. Any bits or registers that are shown in bold in the **AD5781 Memory Map** or **AD5791 Memory Map** tab are modified values that have not been transferred to the evaluation board (see [Figure 7](#)). Click **Apply Changes** to transfer the data to the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ.

The **AD5781 Memory Map** or **AD5791 Memory Map** and bit field tabs serve as tools for debugging purposes only. These tabs can cause glitches in the **INITIAL CONFIGURATION** tab functions in the user interface. The **INITIAL CONFIGURATION** tab is still the recommended tab for use for quick evaluation of the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ.

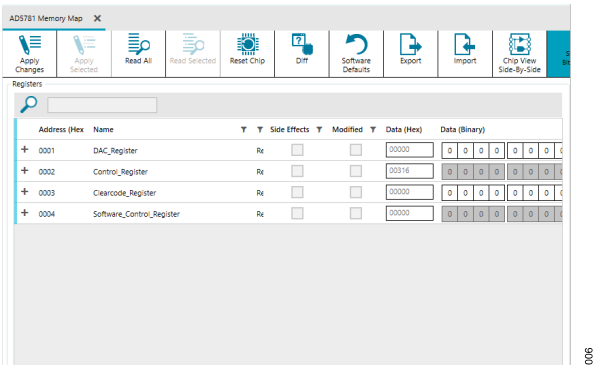


Figure 6. AD5781 Memory Map Tab




Figure 7. AD5781 Memory Map with Unapplied Changes in the DAC_Register

EVALUATION BOARD HARDWARE

POWER SUPPLIES

The EVAL-AD5781ARDZ and EVAL-AD5791ARDZ provide -14 V and $+14\text{ V}$ supplies using the on-board [ADP5070](#) from a single 5 V supply sourced from the [SDP-K1](#) controller board. If a different supply is required or if the evaluation board is controlled through the PMOD connector, an external supply must be provided by the external supply voltage (EXT_VDD and EXT_VSS) connector. See [Table 2](#) for more details.

Every supply is decoupled to ground with $10\text{ }\mu\text{F}$ and $0.1\text{ }\mu\text{F}$ capacitors.

Note that when supplying beyond the 14 V to 16 V range across EXT_VDD, it is recommended to use an external voltage reference.

Table 3. Link Functions

Link	Description
LK1	This link connects the 5 V supply from SDP-K1 to the on-board ADP5070 DC-to-DC converter supply. This link is connected by default.
LK2	This link selects the VDD power supply source. Two options are available, as follows: Position 1-2 selects the on-board power supply, LDO_VDD (default). Position 2-3 selects the external power supply, EXT_VDD.
LK3	This link selects the VSS power supply source. Two options are available, as follows: Position 1-2 selects the on-board power supply, LDO_VSS (default). Position 2-3 selects the external power supply, EXT_VSS.

Table 2. Power Supply Connectors

Connector Label	External Voltage Supplies Description
EXT_VDD	External analog positive power supply. Recommended supply is $+15\text{ V}$.
AGND	Analog ground.
EXT_VSS	External analog negative power supply. Recommended supply is -15 V .

LINK OPTIONS

A number of link options are incorporated on the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ and must be set for the required operating conditions before using the board. The functions of these link options are described in [Table 3](#).

EVALUATION BOARD HARDWARE

ON-BOARD CONNECTORS

Table 4 shows the connectors on the EVAL-AD5781ARDZ or EVAL-AD5791ARDZ.

Table 4. On-Board Connectors

Connector	Function
J1 to J9	Voltage reference daughter board connectors
VOUT	DAC output
VOUT_BUFF	DAC output with amplifier

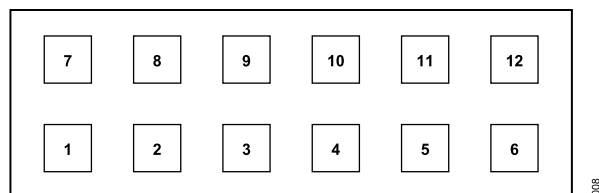


Figure 8. PMOD Pin Layout

Table 5. PMOD Connector Pin Descriptions

Pin Number	Descriptions
1	SYNCB
2	SDIN
3	SDO
4	SCLK
5, 11	DGND
6, 12	VLOGIC
7	LDAC
8	RESET
9	CLR
10	NC

VOLTAGE REFERENCE DAUGHTER BOARDS

The daughter boards inserted into the J1, J4 and J9 connectors includes a voltage reference. The voltage supplied by the voltage references are gained up and inverted to provide both the positive and negative reference voltages required by the [AD5781](#) and [AD5791](#).

The EVAL-AD5781ARDZ and EVAL-AD5791ARDZ evaluation kits include the [EV-ADR445-REFZ](#) reference board to complete the hardware required to evaluate the AD5781 and AD5791, respectively. The [ADR445](#) is a 5 V low noise reference with 3 ppm/°C maximum temperature drift and 2.25 μ V p-p noise specifications across the operating temperature range.

The [EV-LTC6655-REFZ](#) and [EV-LTZ1000-REFZ](#) reference boards include the [LTC6655](#) and [LTZ1000](#) voltage references, respectively, are also available to evaluate the AD5781 and AD5791. These boards can be purchased separately via the [EVAL-AD5781](#) and [EVAL-AD5791](#) web pages.

The LTC6655 reference board offers improved noise and temperature drift performance over the ADR445 solution. The LTC6655 is a

low noise, low drift precision reference with 2 ppm/°C temperature drift and 1.25 μ V p-p noise.

The LTZ1000 reference board components maintain the accuracy of the AD5781 and AD5791. The LTZ1000 is a 7.2 V ultraprecision reference specified with 0.05 ppm/°C temperature drift and ultralow 1.2 μ V p-p noise. the LTZ1000 voltage reference is used in conjunction with low drift amplifiers ([ADA4077-2](#)) and a low drift, thermally matched resistor for the scaling and gain circuits. Place a cover over the reference board to reduce thermal errors due to air current flowing over the reference board.

600



EVALUATION BOARD SCHEMATICS

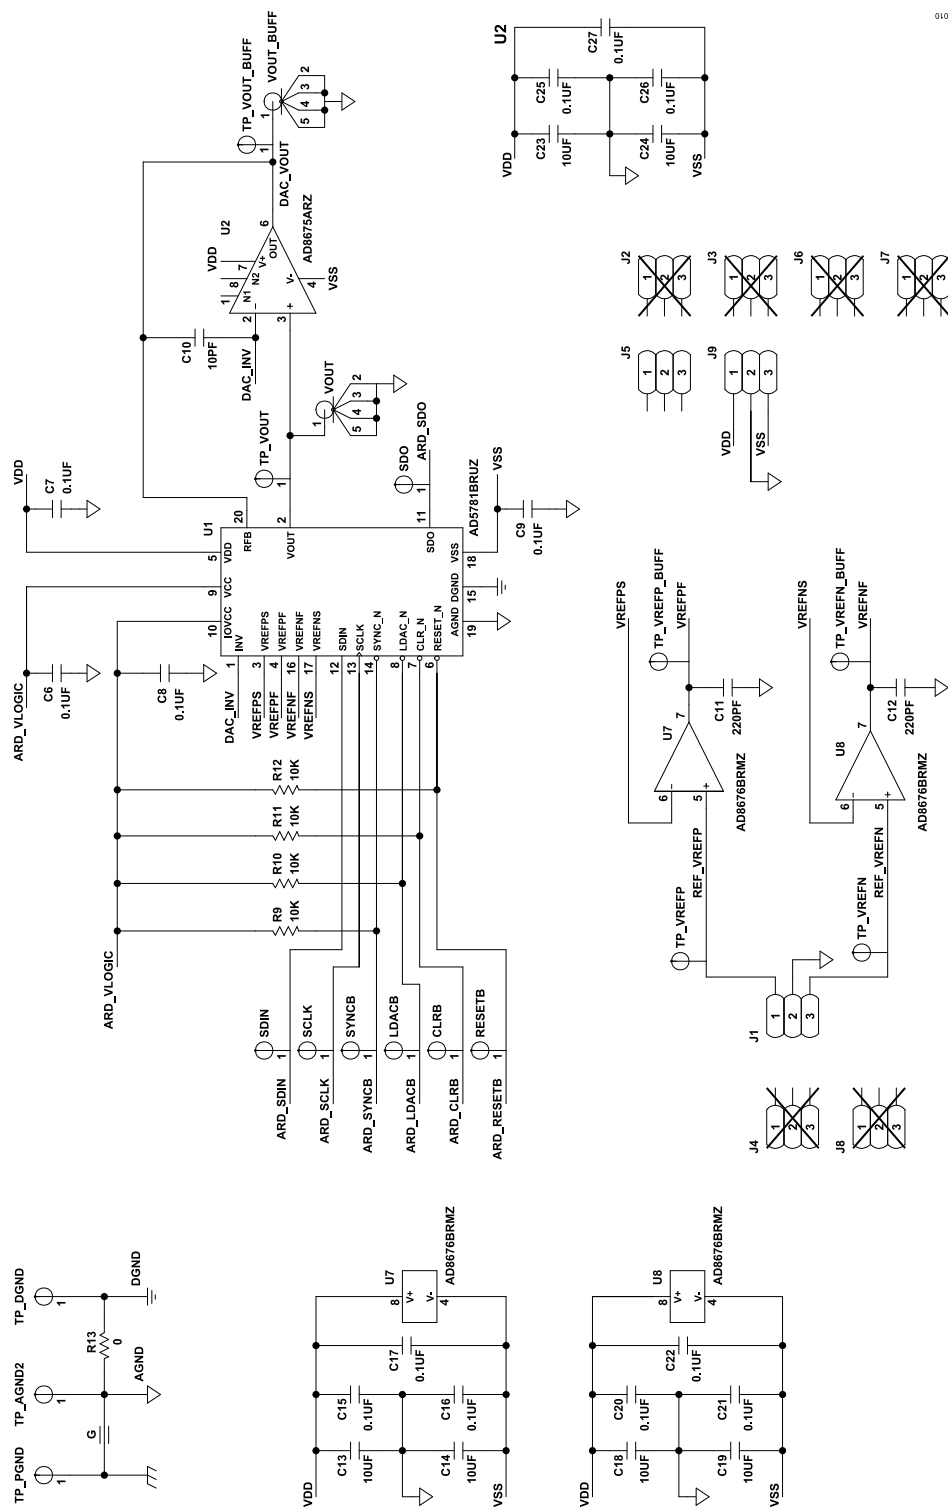


Figure 10. EVAL-AD5781ARDZ Schematic, Main Circuitry

EVALUATION BOARD SCHEMATICS

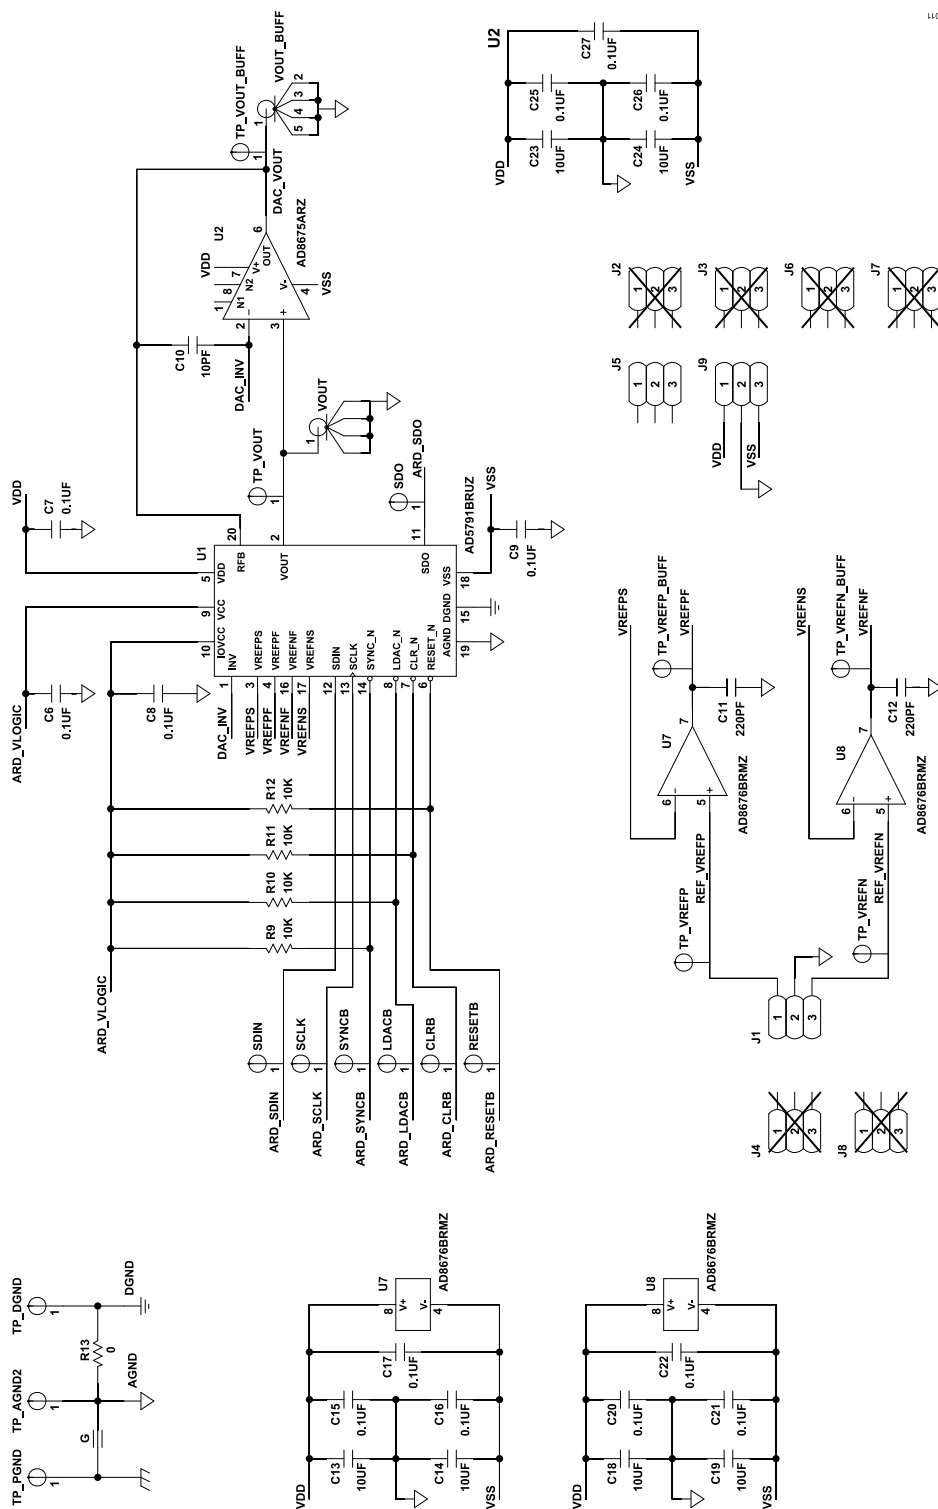


Figure 11. EVAL-AD5791ARDZ Schematic, Main Circuitry

EVALUATION BOARD SCHEMATICS

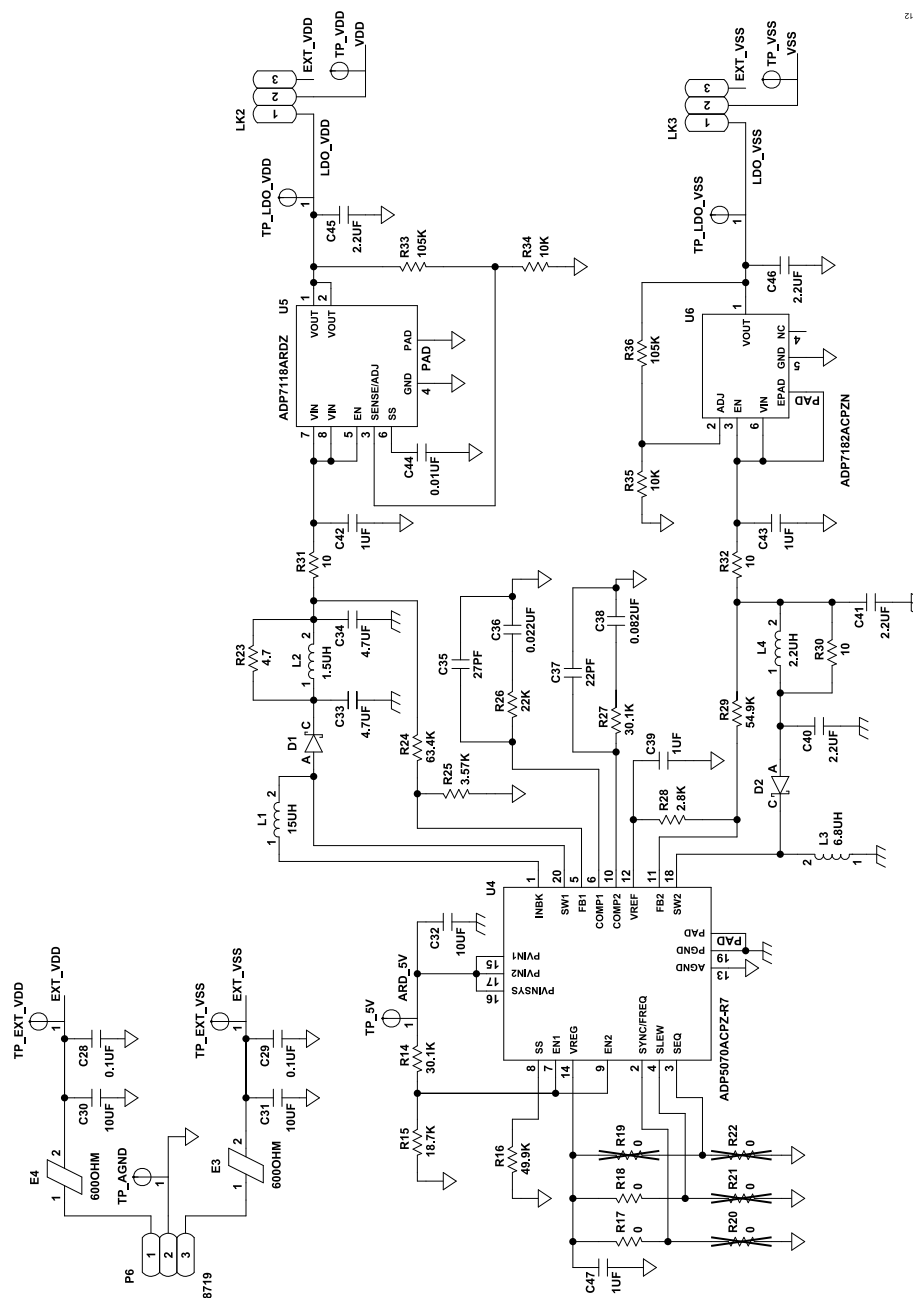


Figure 12. EVAL-AD5781ARDZ and EVAL-AD5791ARDZ Schematic, Power Circuitry

013



EVALUATION BOARD SCHEMATICS


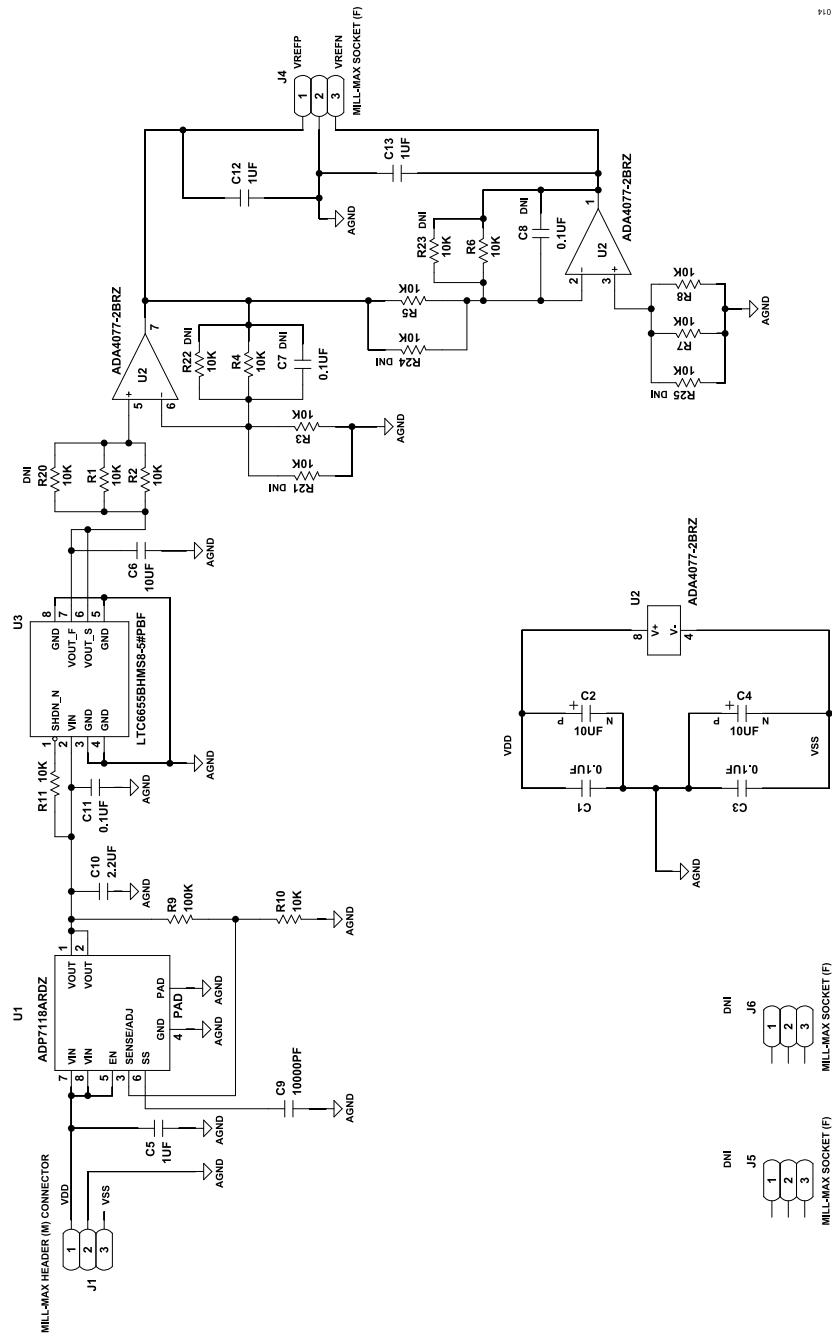


Figure 14. EV-LTC6655-REFZ Schematic

510



Rev. 0 | 15 of 16

NOTES